
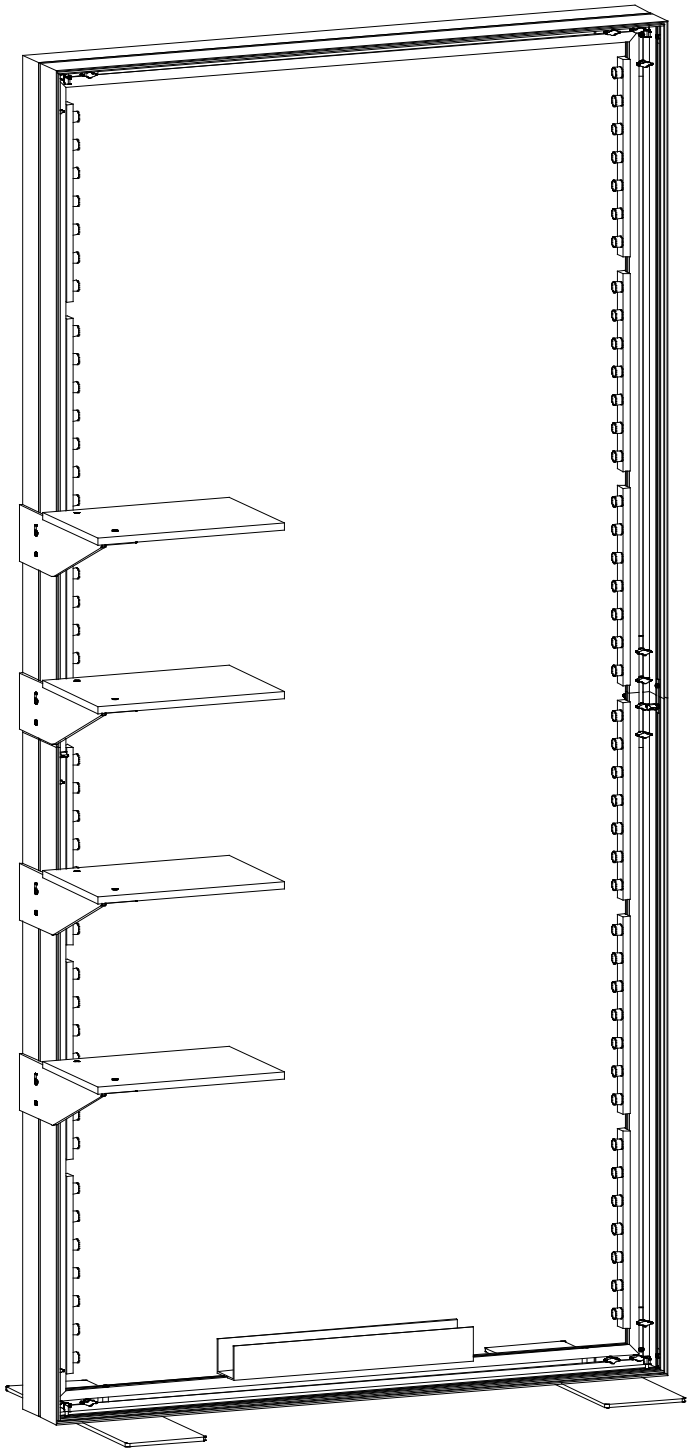


Plan View

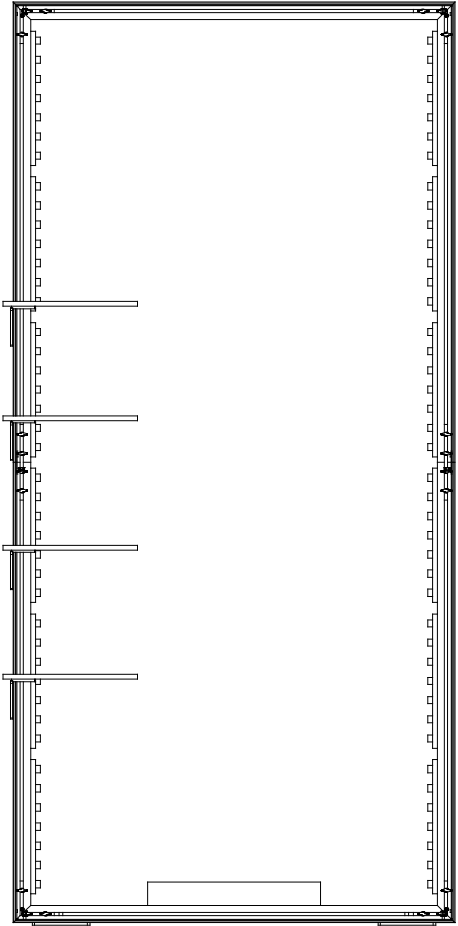

Elevation View

***SETUP INSTRUCTIONS***

# General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

# Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

# Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

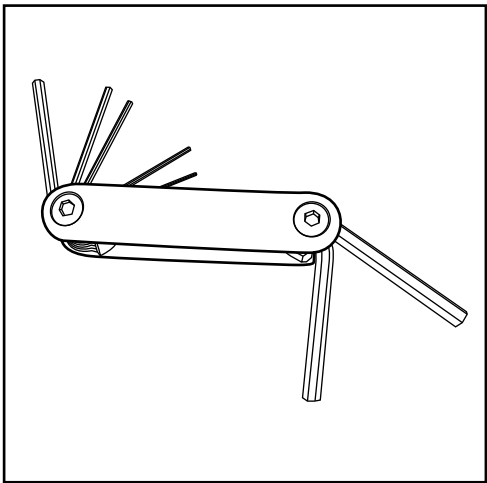


Hex Tool - Essential for Assembly

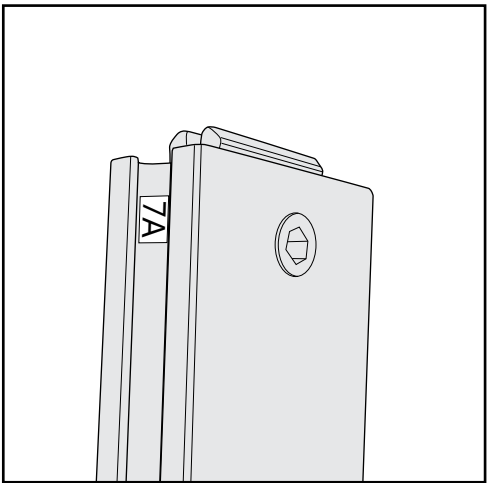


Part Identification - Numbering

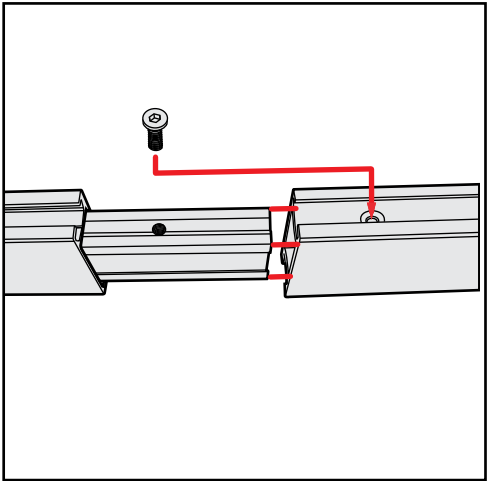


Spline Connection

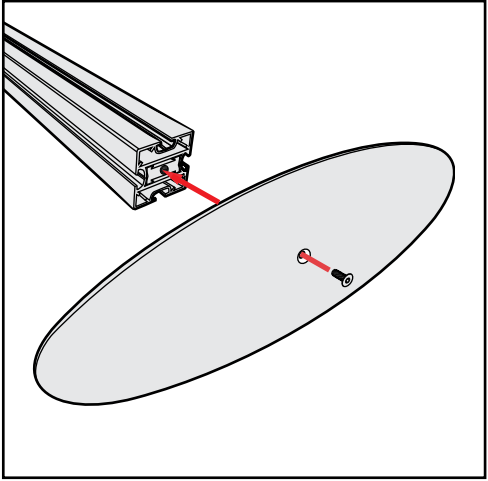

Base Plate & Extrusion Connection

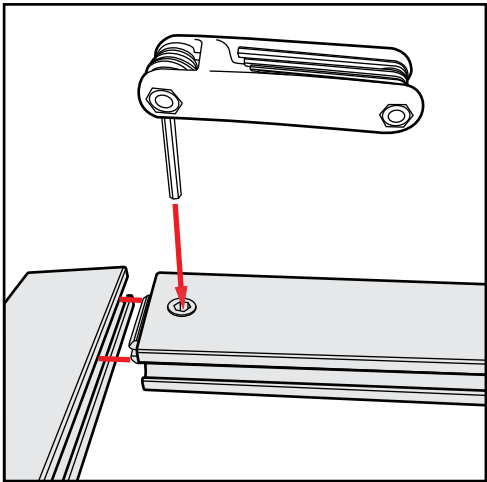

Extrusion & Lock Connection

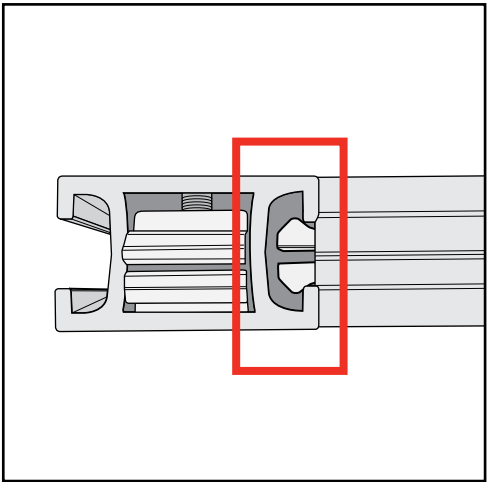


Engaged Lock



**WARNING**



DO NOT USE POWER TOOLS

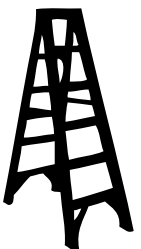

LADDERS OR LIFTS  
MAY BE REQUIRED




ALL CONNECTIONS MUST  
BE TIGHTLY SECURED


## Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

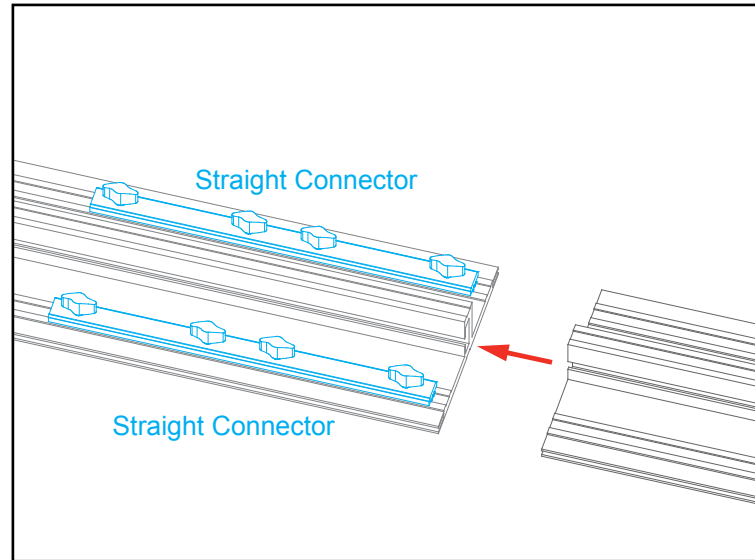

Slide both connectors across seam of extrusions.  
Tighten all knobs.

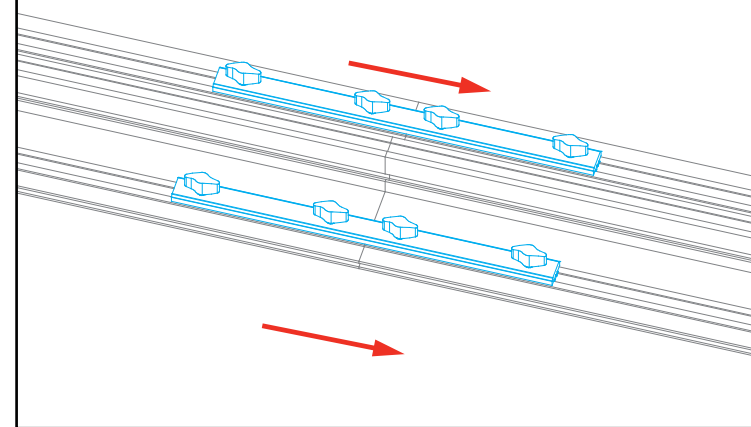

All knobs must be tightened securely to ensure a proper connection.

## Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

## Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

## Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

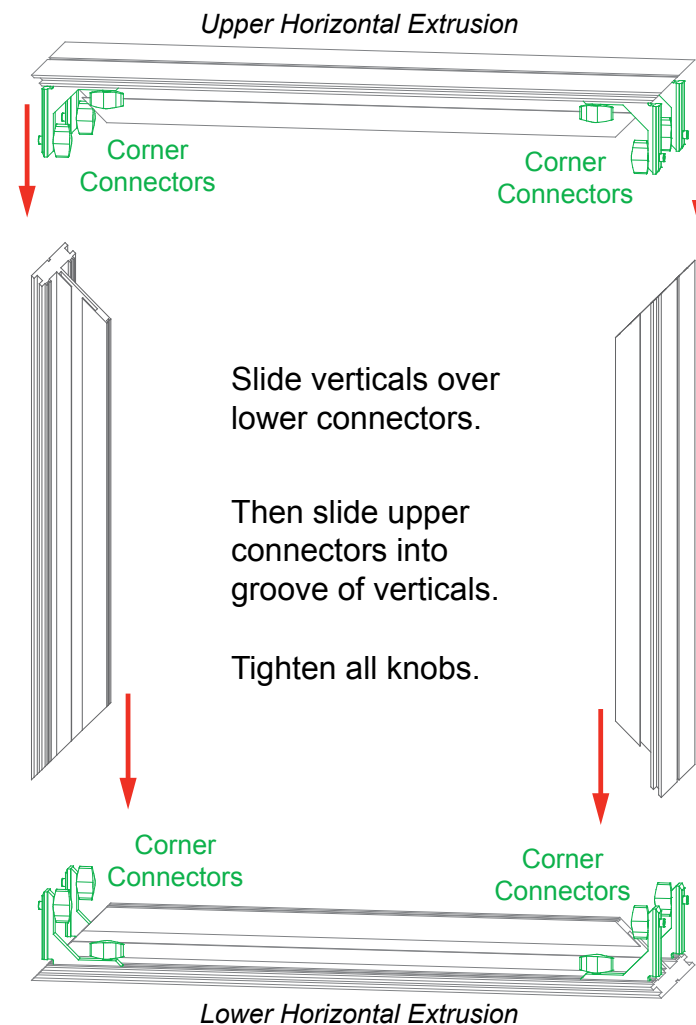


Adjust connectors if necessary to prevent gaps in connection.

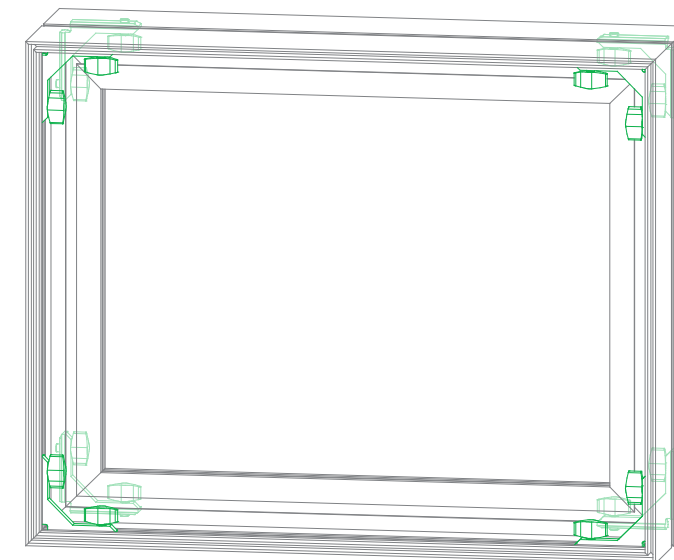

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.

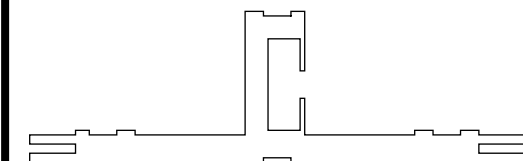


CEI152 Profile


# SEG Graphic Installation *in 3 Steps*

*The Perfect Fit*


## STEP 1: Attach Corners

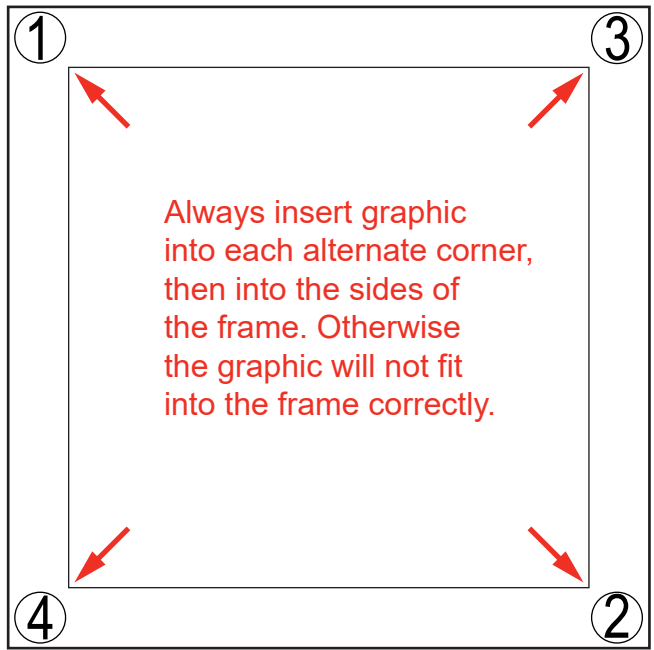

## STEP 2: Attach Middle

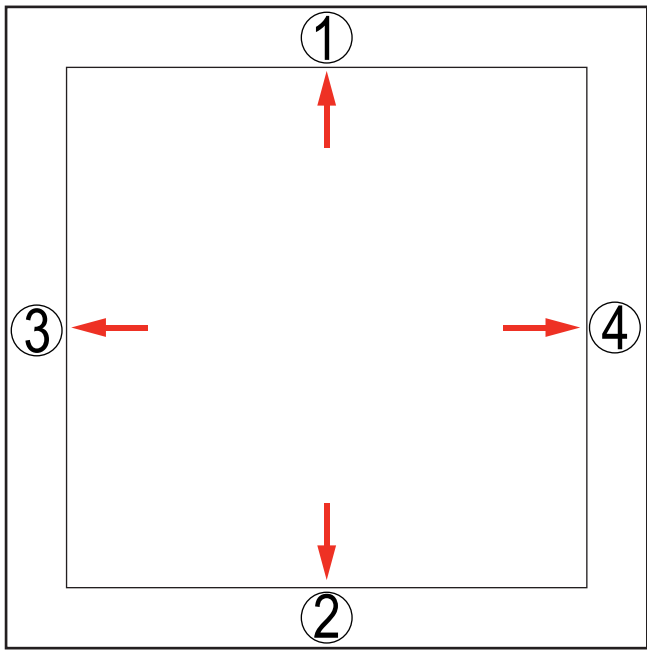

## STEP 3: Attach Sides

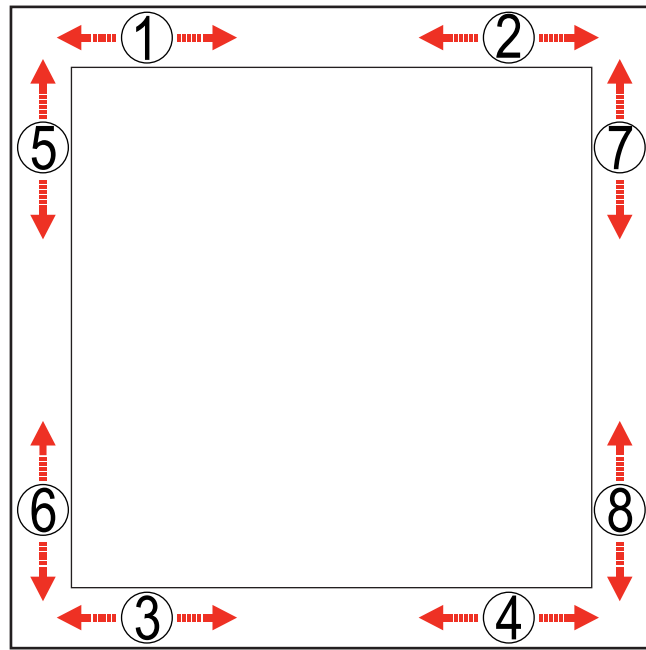

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.  
Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.  
Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.  
Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.  
  
*Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.*




*To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.*


*Install video:*



Top View of Each Level




Level 1  
*(Bottom level)*




Level 2




Level 3




Level 4



Level 5

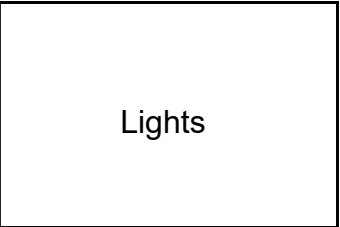


Lights

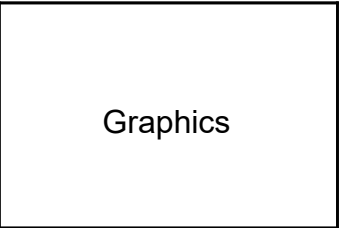

Graphics



Setup Hardware

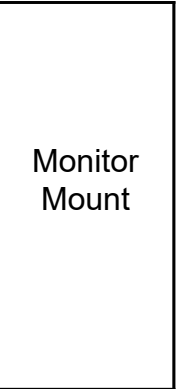

Monitor  
Mount


| Item | Qty. | Description                      |
|------|------|----------------------------------|
| 1    | 2    | 6" x 22" Rectangular Base Plate  |
| 2/2A | 1/1  | 48"h CEI152 Vertical Extrusion   |
| 3/3A | 1/1  | 48"h CEI152 Vertical Extrusion   |
| 4/4A | 1/1  | 46"w CEI152 Horizontal Extrusion |
| --   | 1    | U-Channel                        |

- Steps:
- 1) Install Base Plates [1] to bottom of horizontal [4] using bolts.



2) Attach U-Channel to horizontal [4]. See [U-Channel Attachment](#) detail.

3) Assemble verticals [2-2A], [3-3A] together. See [CEI152 Straight Connection](#) detail.

4) Connect horizontals [4,4A] between vertical assemblies [2/2A] & [3/3A].  
See [CEI152 Corner Connection](#) detail.

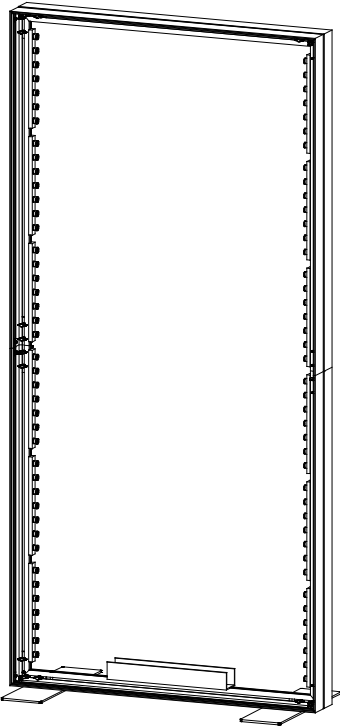

When assembled

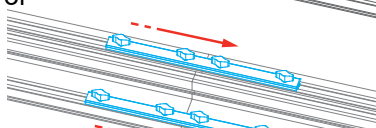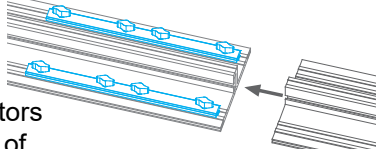


**\* CEI-152 Straight Connection**

1. Place extrusions end-to-end.

2. Slide connectors across seam of extrusions.


3. Tighten all knobs to secure connection.



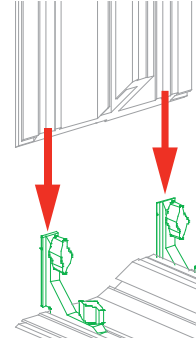


**\* CEI152 Corner Connection**

1. Slide extrusion onto corner connectors.

2. Tighten all knobs to secure connection.

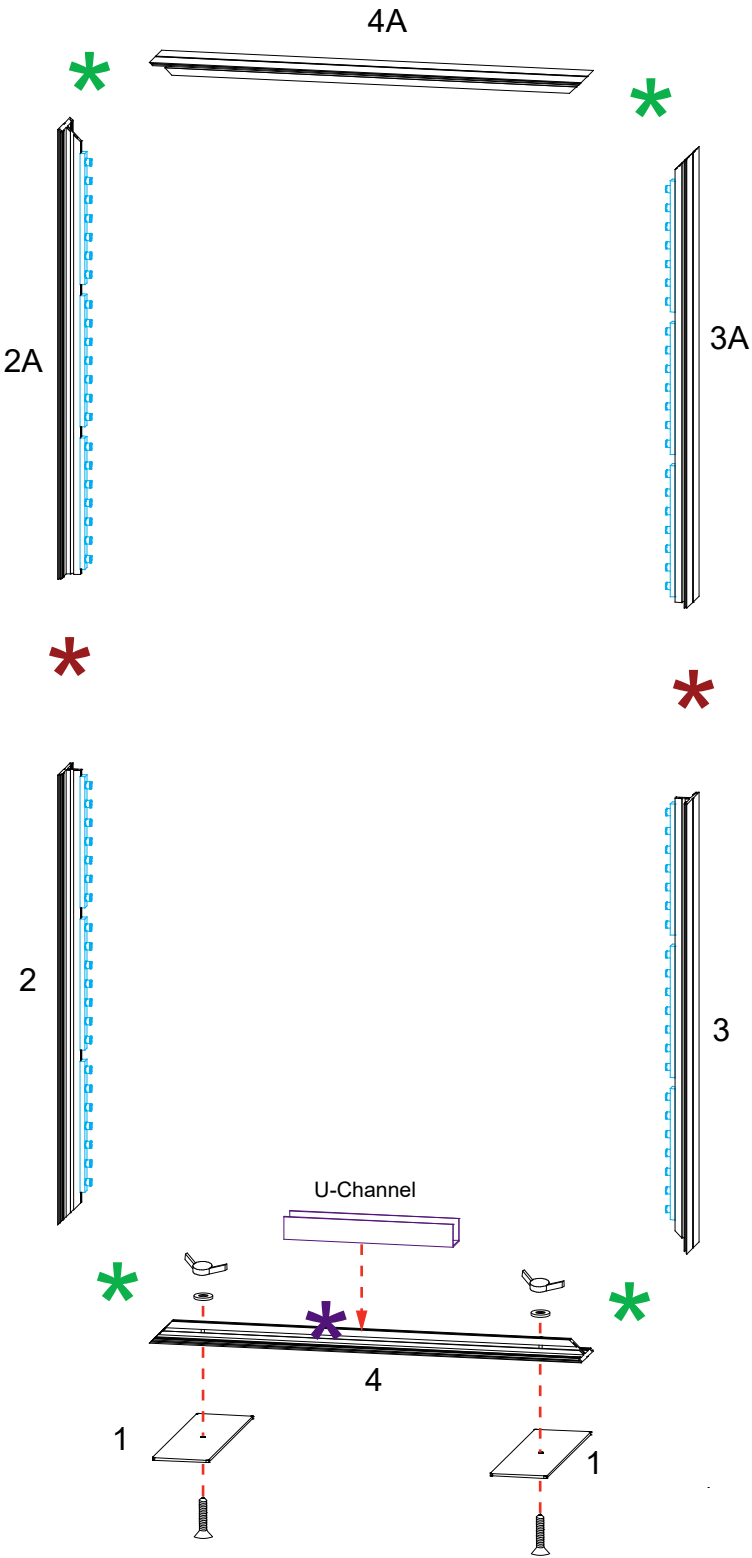

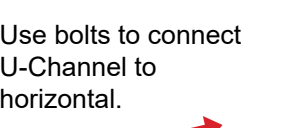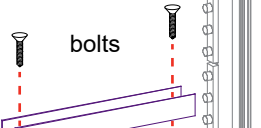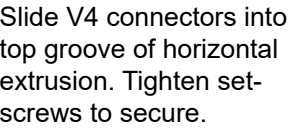

**\* U-Channel Attachment**


Slide V4 connectors into top groove of horizontal extrusion. Tighten set-screws to secure.

Use bolts to connect U-Channel to horizontal.


| Item | Qty. | Description                |
|------|------|----------------------------|
| 5    | 4    | Single-sided Shelf Bracket |

- Steps:
- 1) Connect power cords to Supernova lights as shown.
  - 2) Apply SEG graphic & blocker to assembled frame.
  - 3) Attach shelf brackets [5] to verticals, then connect shelves to shelf brackets. See **Shelf Attachment** detail.


\* Shelf Attachment

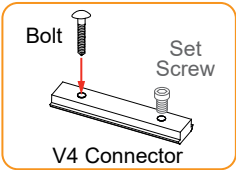


- 1. Slide V4 with bolt into groove of vertical extrusion; tighten bolt to secure V4 connector at desired location.
- 2. Place keyhole of shelf over bolt on V4 connector; slide shelf down.

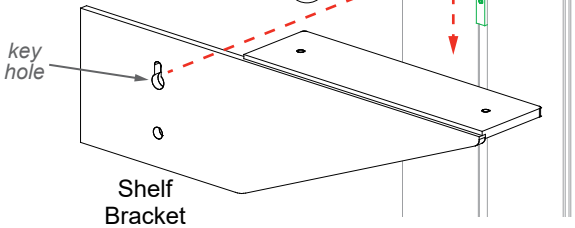


- 3. Attach knob to V4 & tighten to secure shelf in place.
- 4. Connect shelf to brackets using bolts.

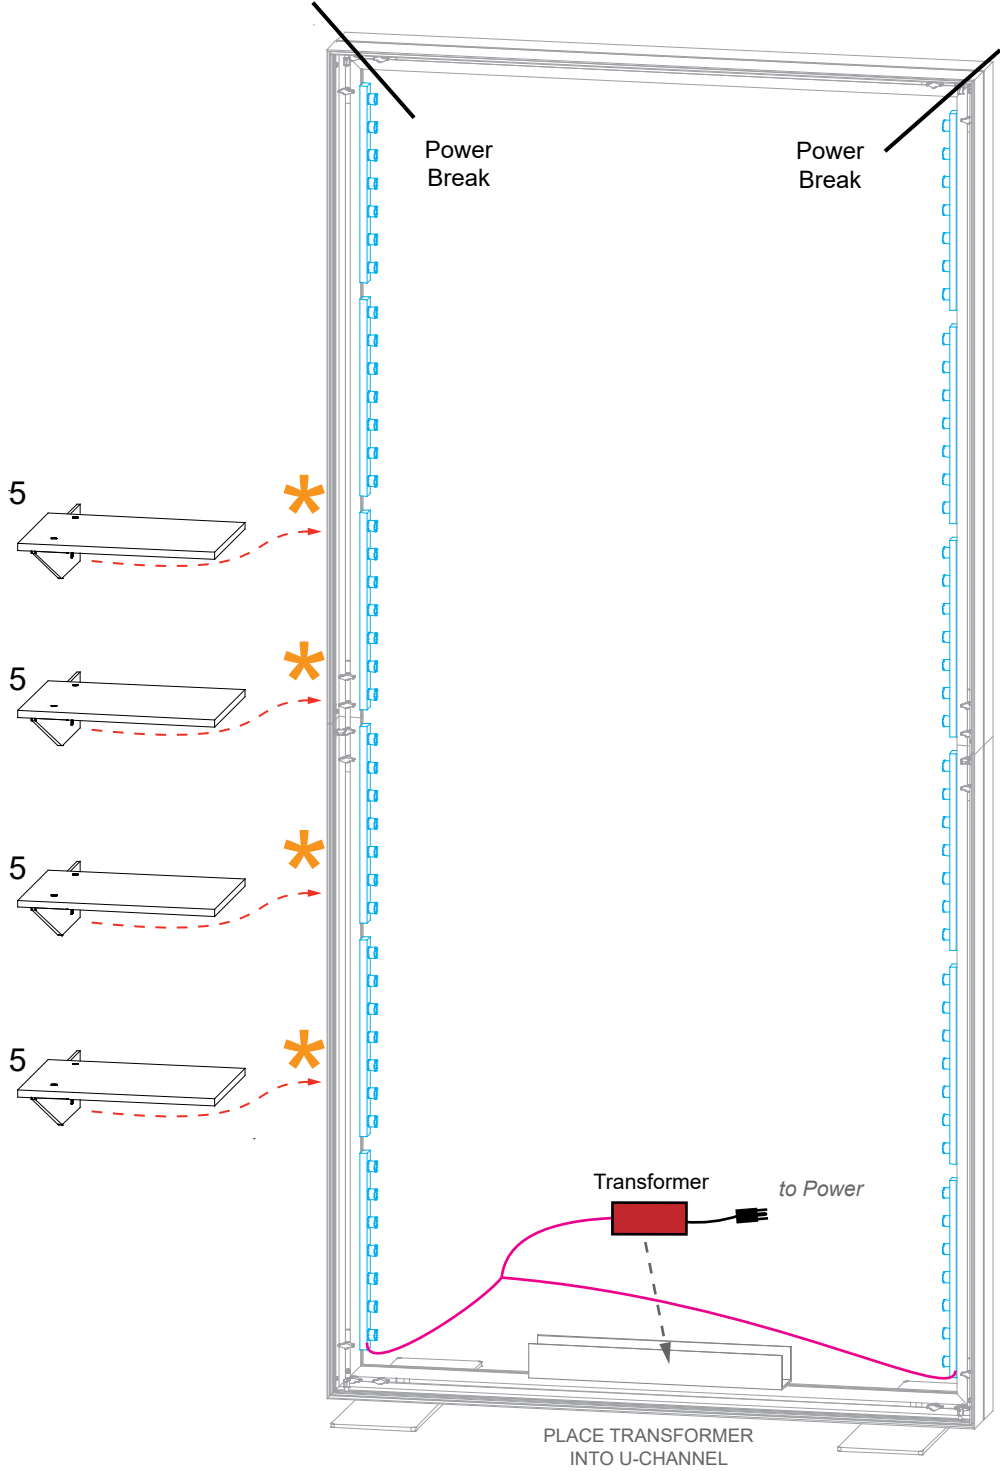


Light to Light Attachment



Light to Transformer Attachment

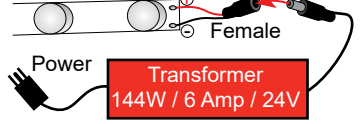


Maximum of 7 lights per chain,  
12 lights per Transformer

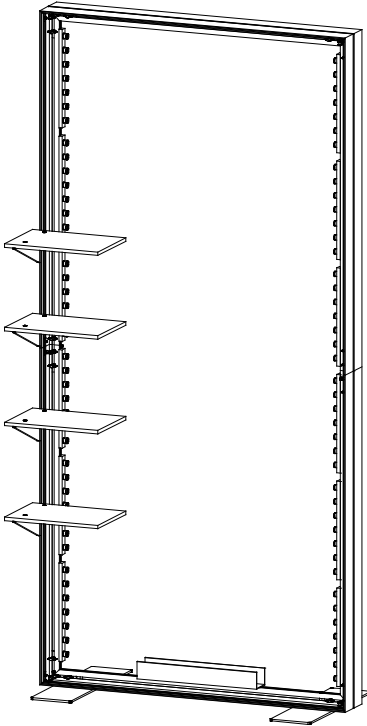

When assembled

SEG Graphic Installation

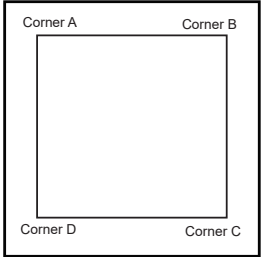

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.




Step 1  
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2  
Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Step 3  
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

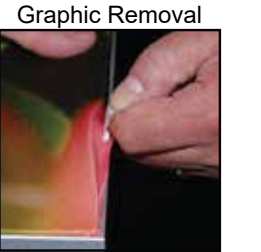

Graphic Removal  
To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.