



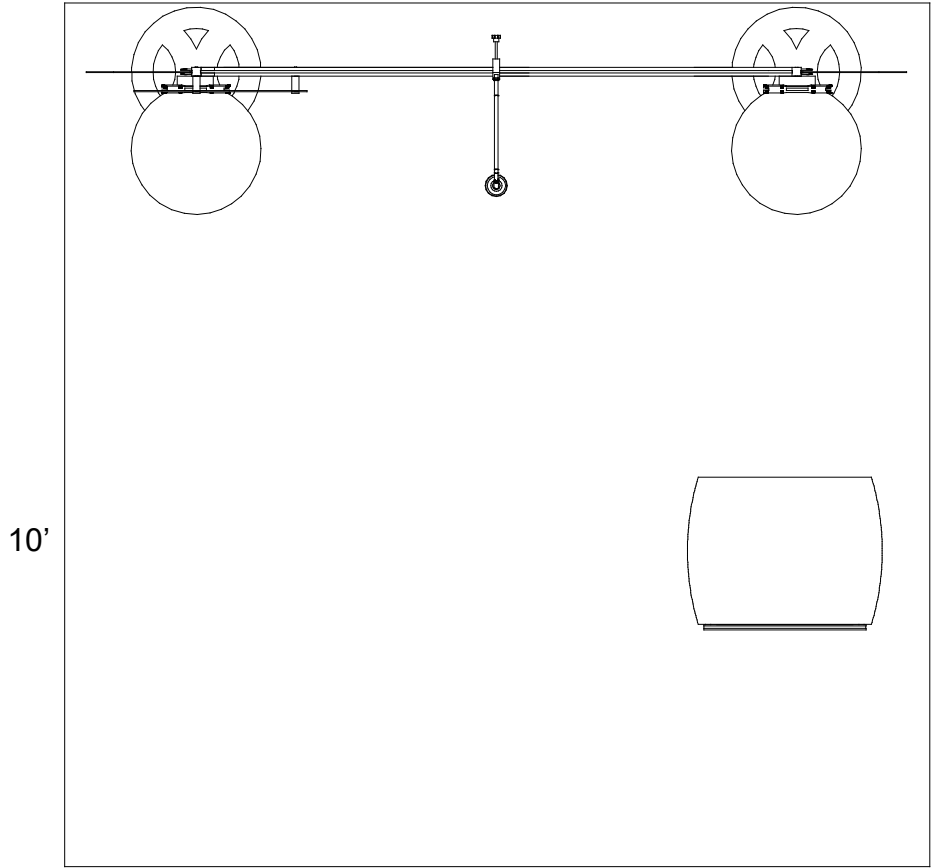


10' Plan View

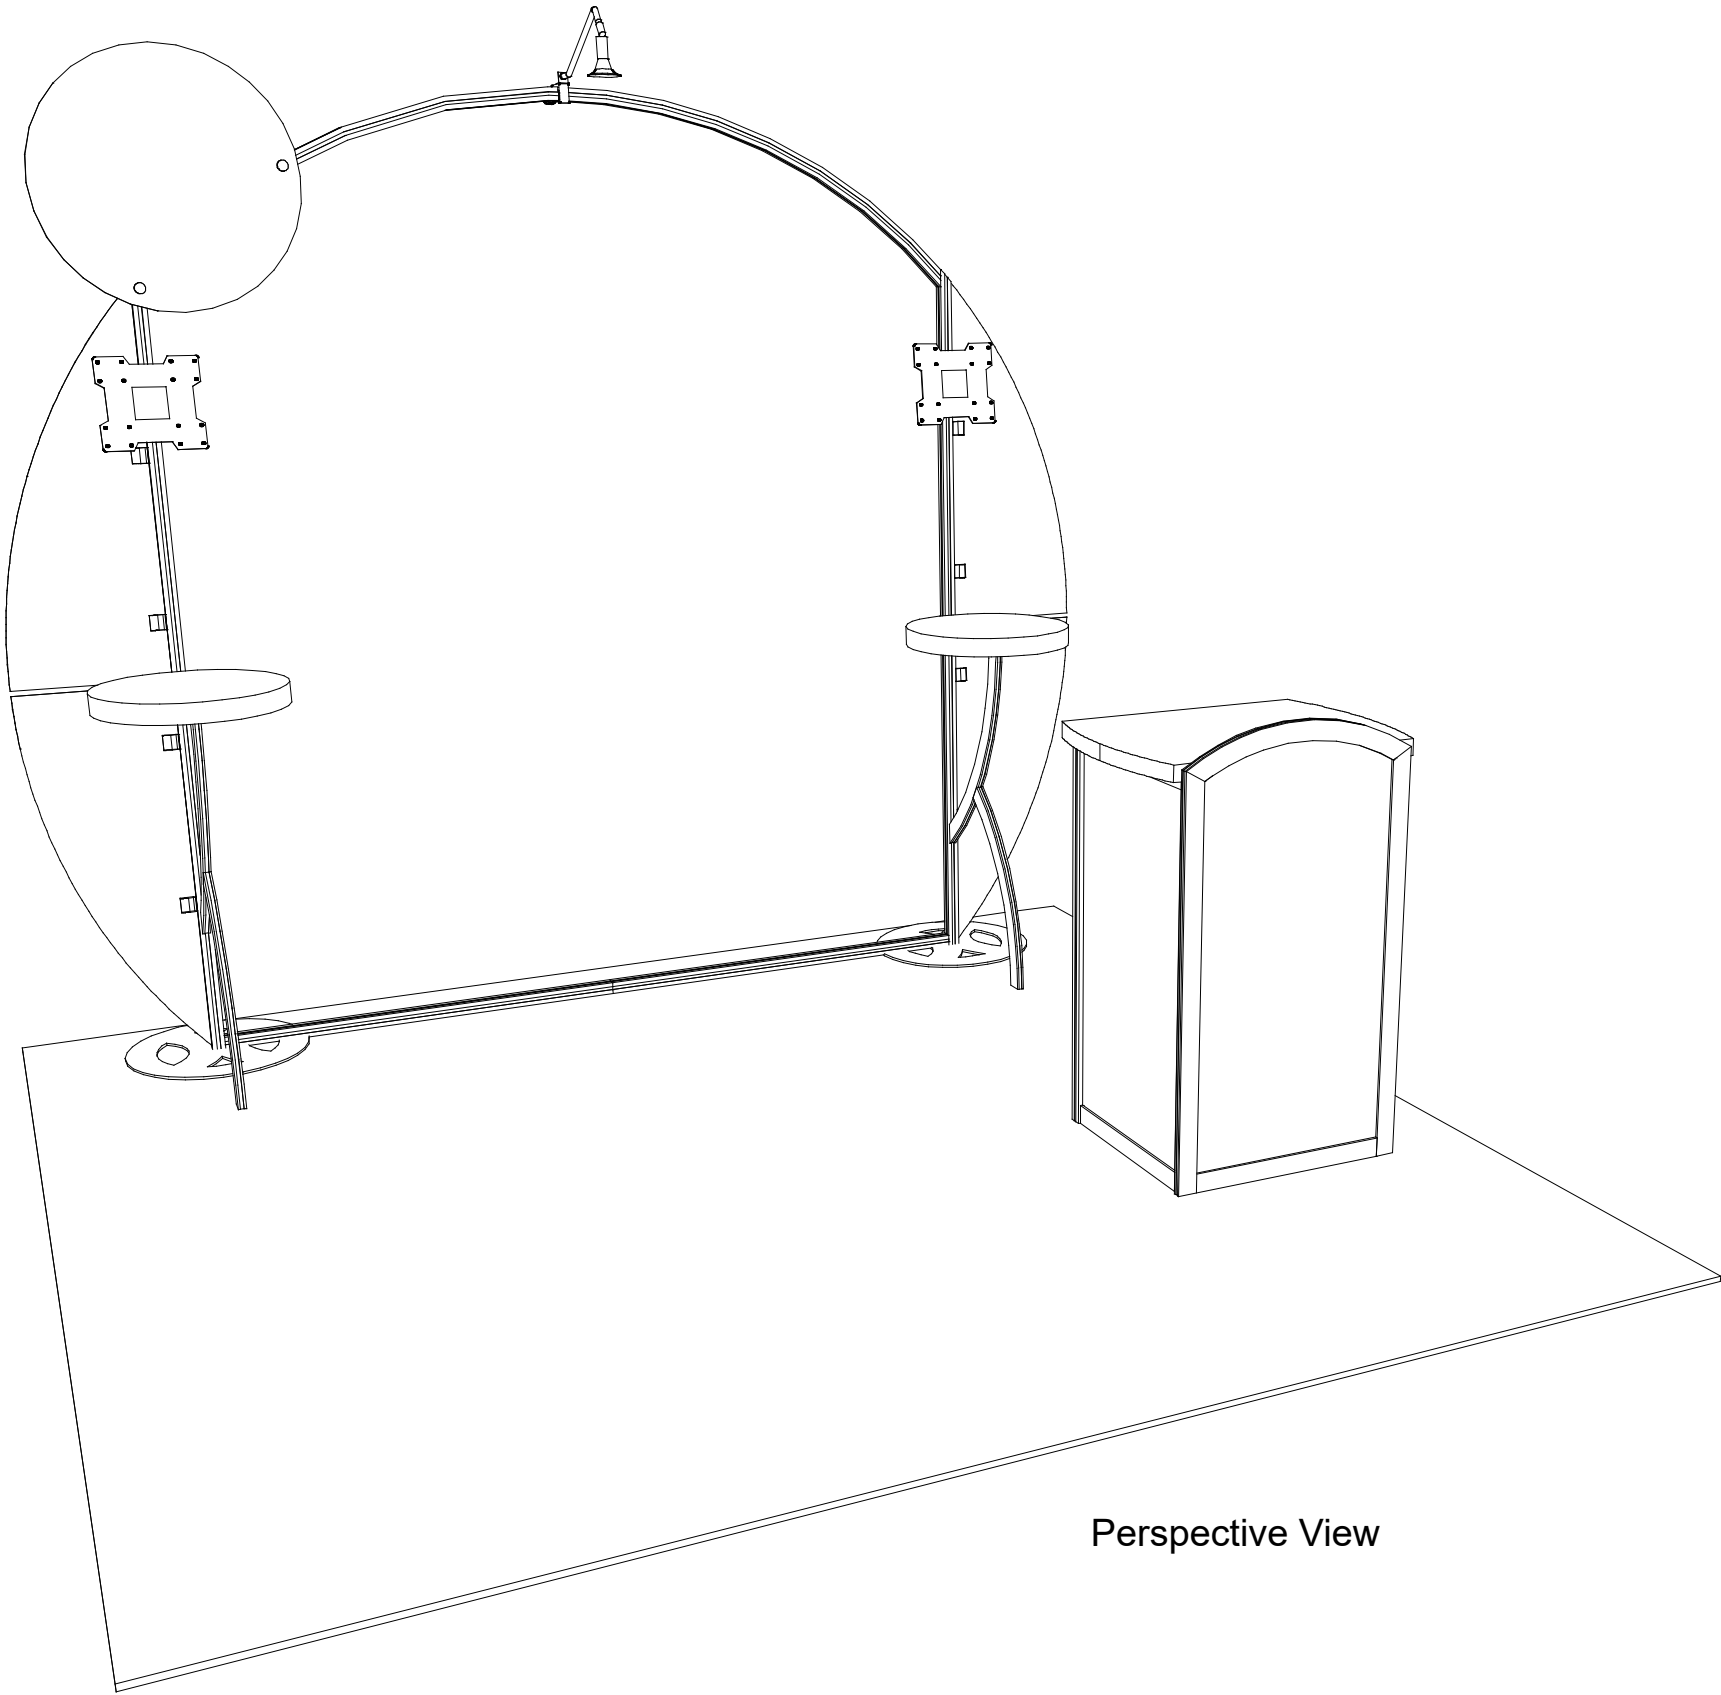

Perspective View

# SETUP INSTRUCTIONS

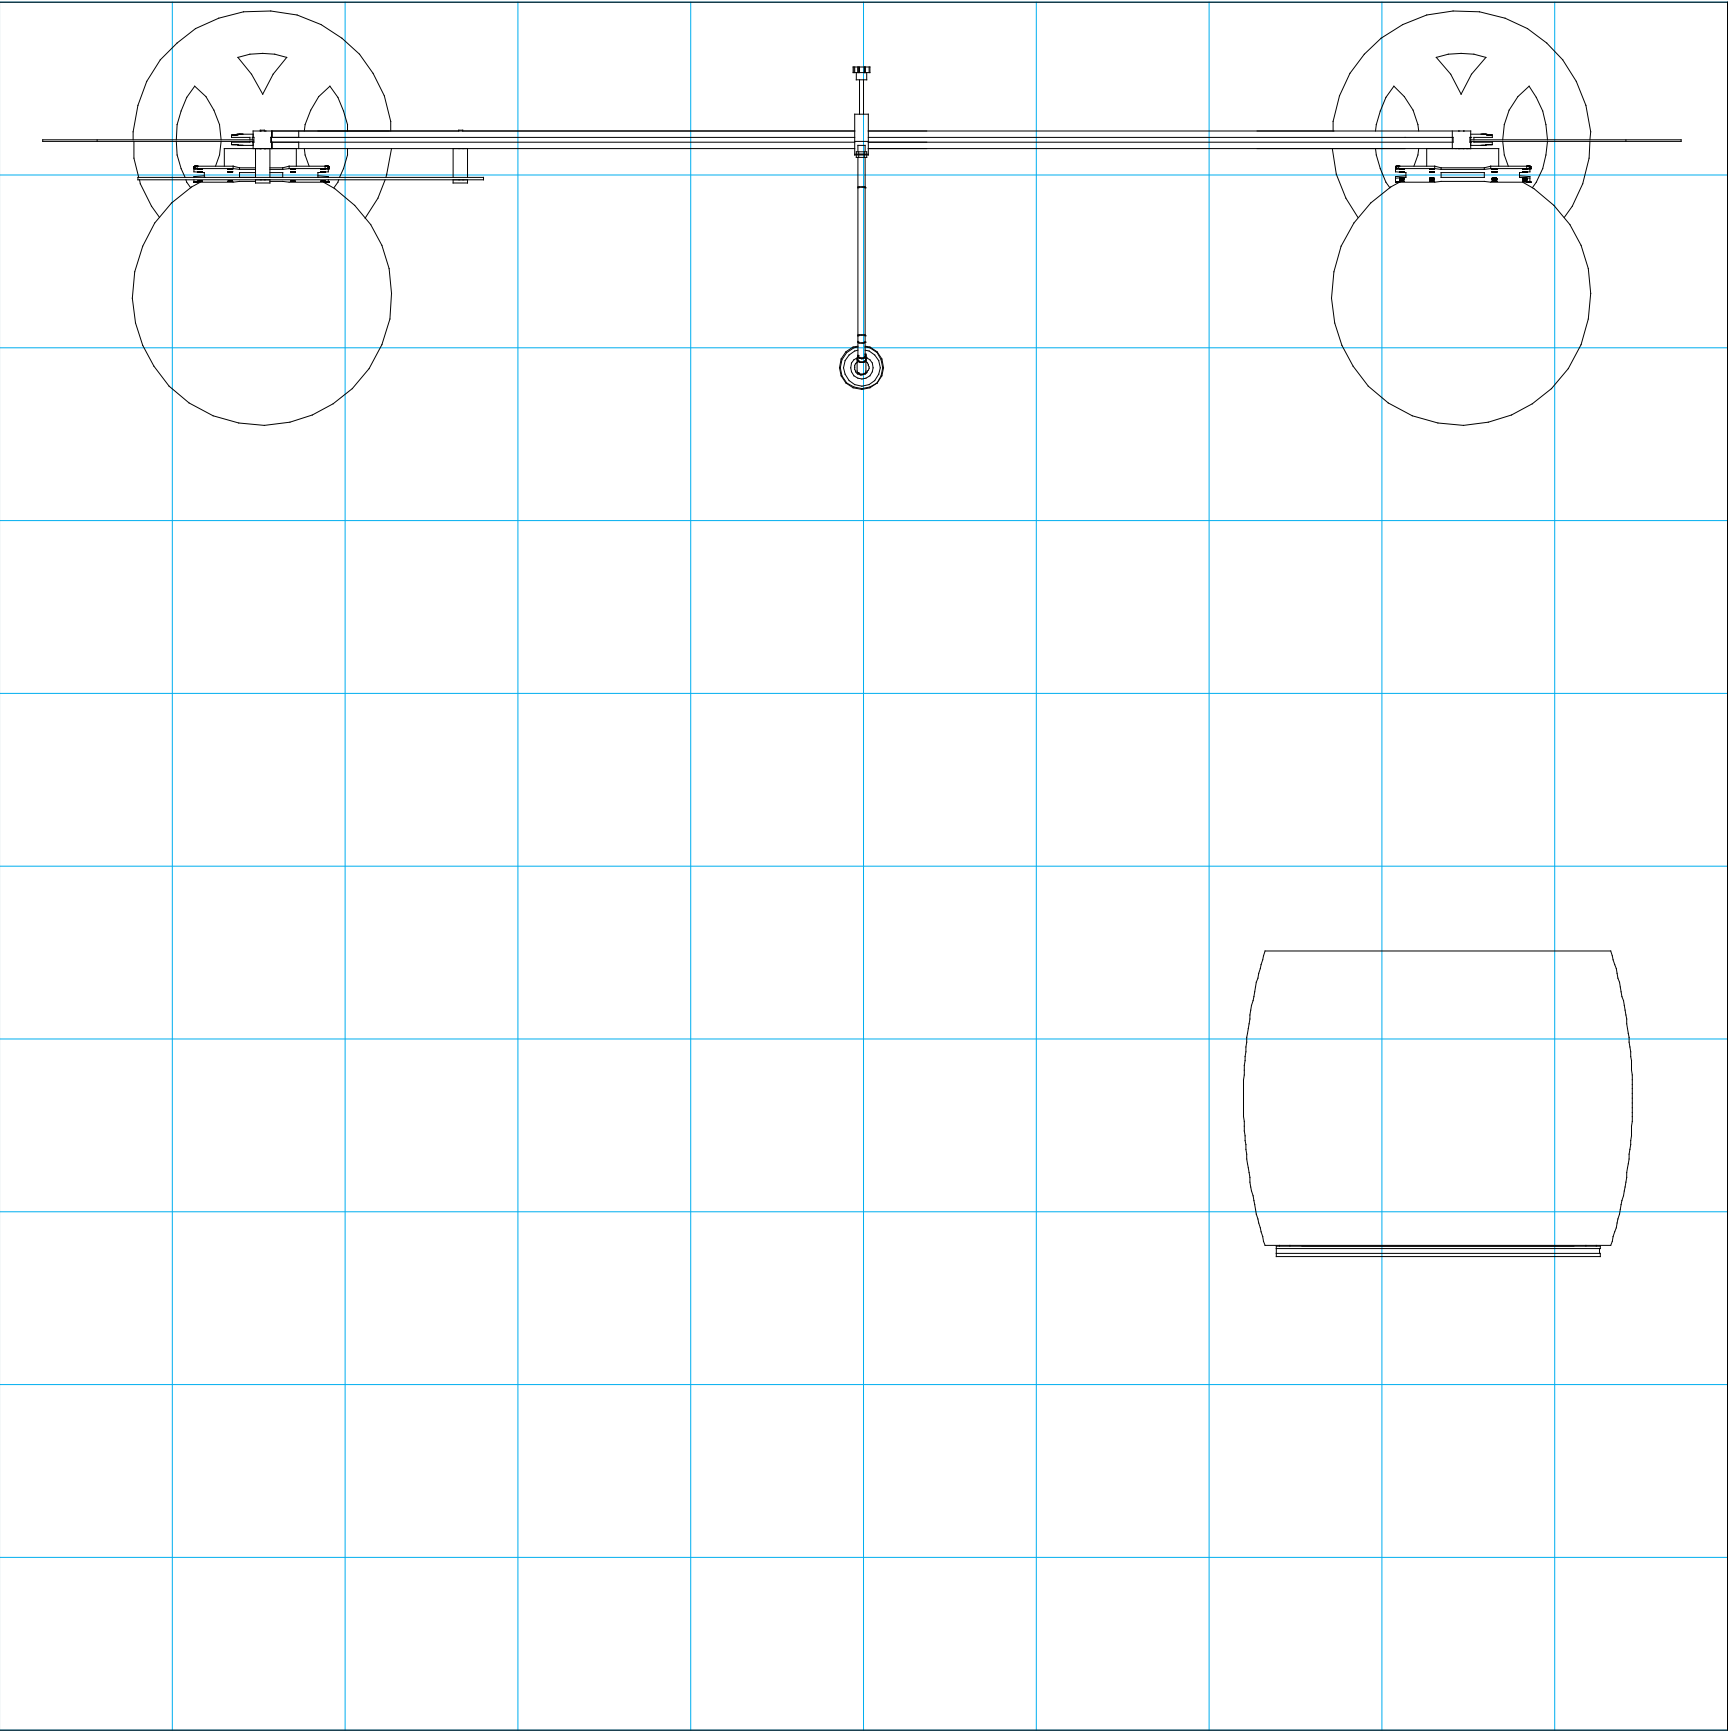

= 1 sq foot

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

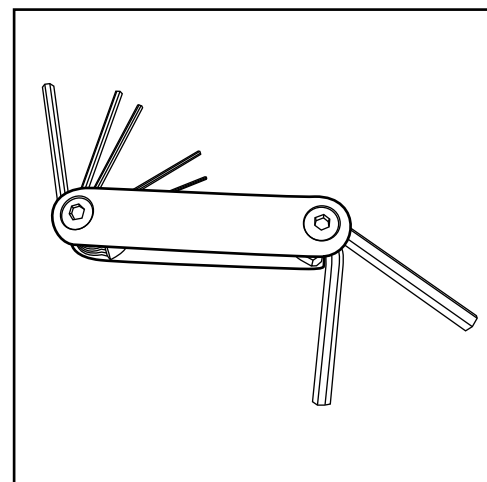


Hex Tool - Essential for Assembly

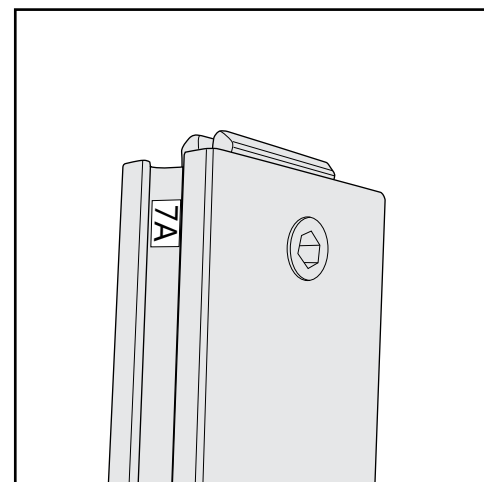


Part Identification - Numbering

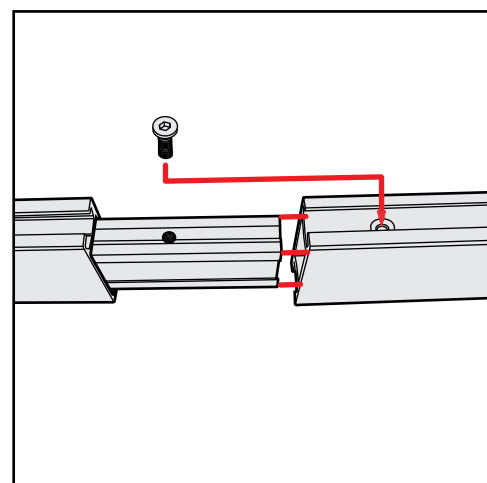


Spline Connection

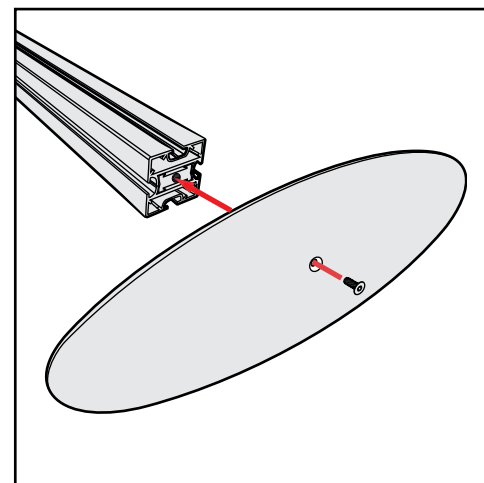

Base Plate & Extrusion Connection

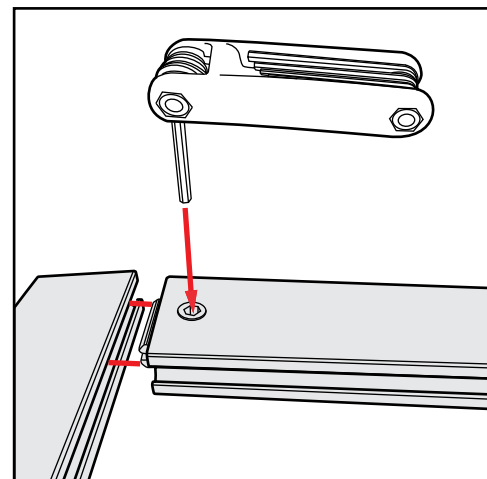

Extrusion & Lock Connection

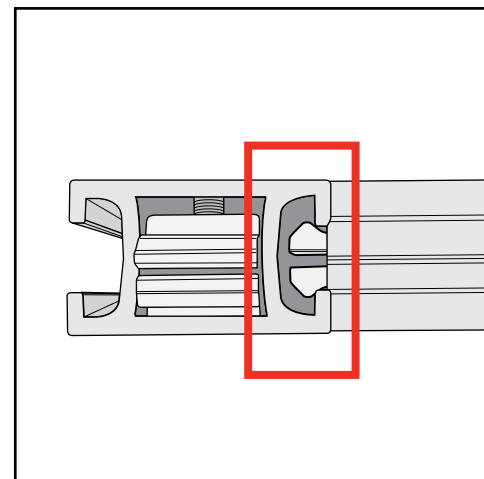

Engaged Lock



# WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED



ALL CONNECTIONS MUST  
BE TIGHTLY SECURED

| Item | Qty. | Description                                  |
|------|------|----------------------------------------------|
| 1A   | 2    | Base Plates                                  |
| 1    | 1    | 39" Vertical extrusion                       |
| 2    | 1    | 39" Vertical extrusion top left outside cut  |
| 3    | 1    | 39" Vertical extrusion                       |
| 4    | 1    | 39" Vertical extrusion top right outside cut |
| 5    | 1    | 41" Horizontal extrusion                     |
| 6    | 1    | 41" Horizontal extrusion                     |
| 7    | 1    | 41" Top left curved extrusion                |
| 8    | 1    | 41" Top right curved extrusion               |

Steps:

- 1) Attach base plates [1A] to lower verticals [1,3].
- 2) Connect upper verticals [2,4] with connection bars [b].
- 3) Connect horizontals [5,6] with connection bar [a].
- 4) Connect vertical [1/2,3/4] with horizontal assembly [5/6].
- 5) Connect curved extrusions [7,8] with connection bar [a].
- 6) Connect curved assembly [7/8] between verticals [1/2,3/4].
- 7) Attach Graphic to velcro on back of frame as shown.

★ indicates location of knobs on BACKSIDE of unit.





Knob

Knob

Turn Knob Clockwise to Tighten Lock

Do not over tighten Knobs

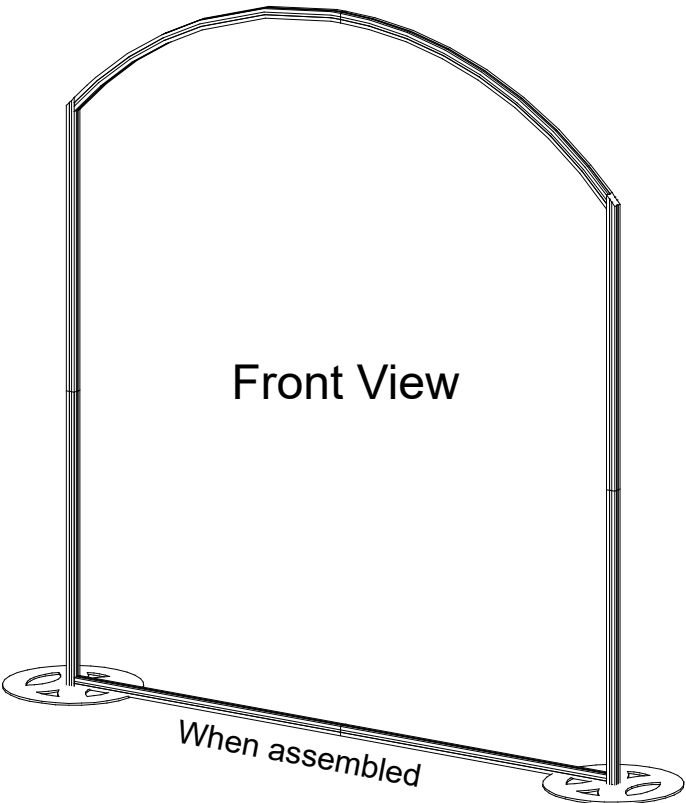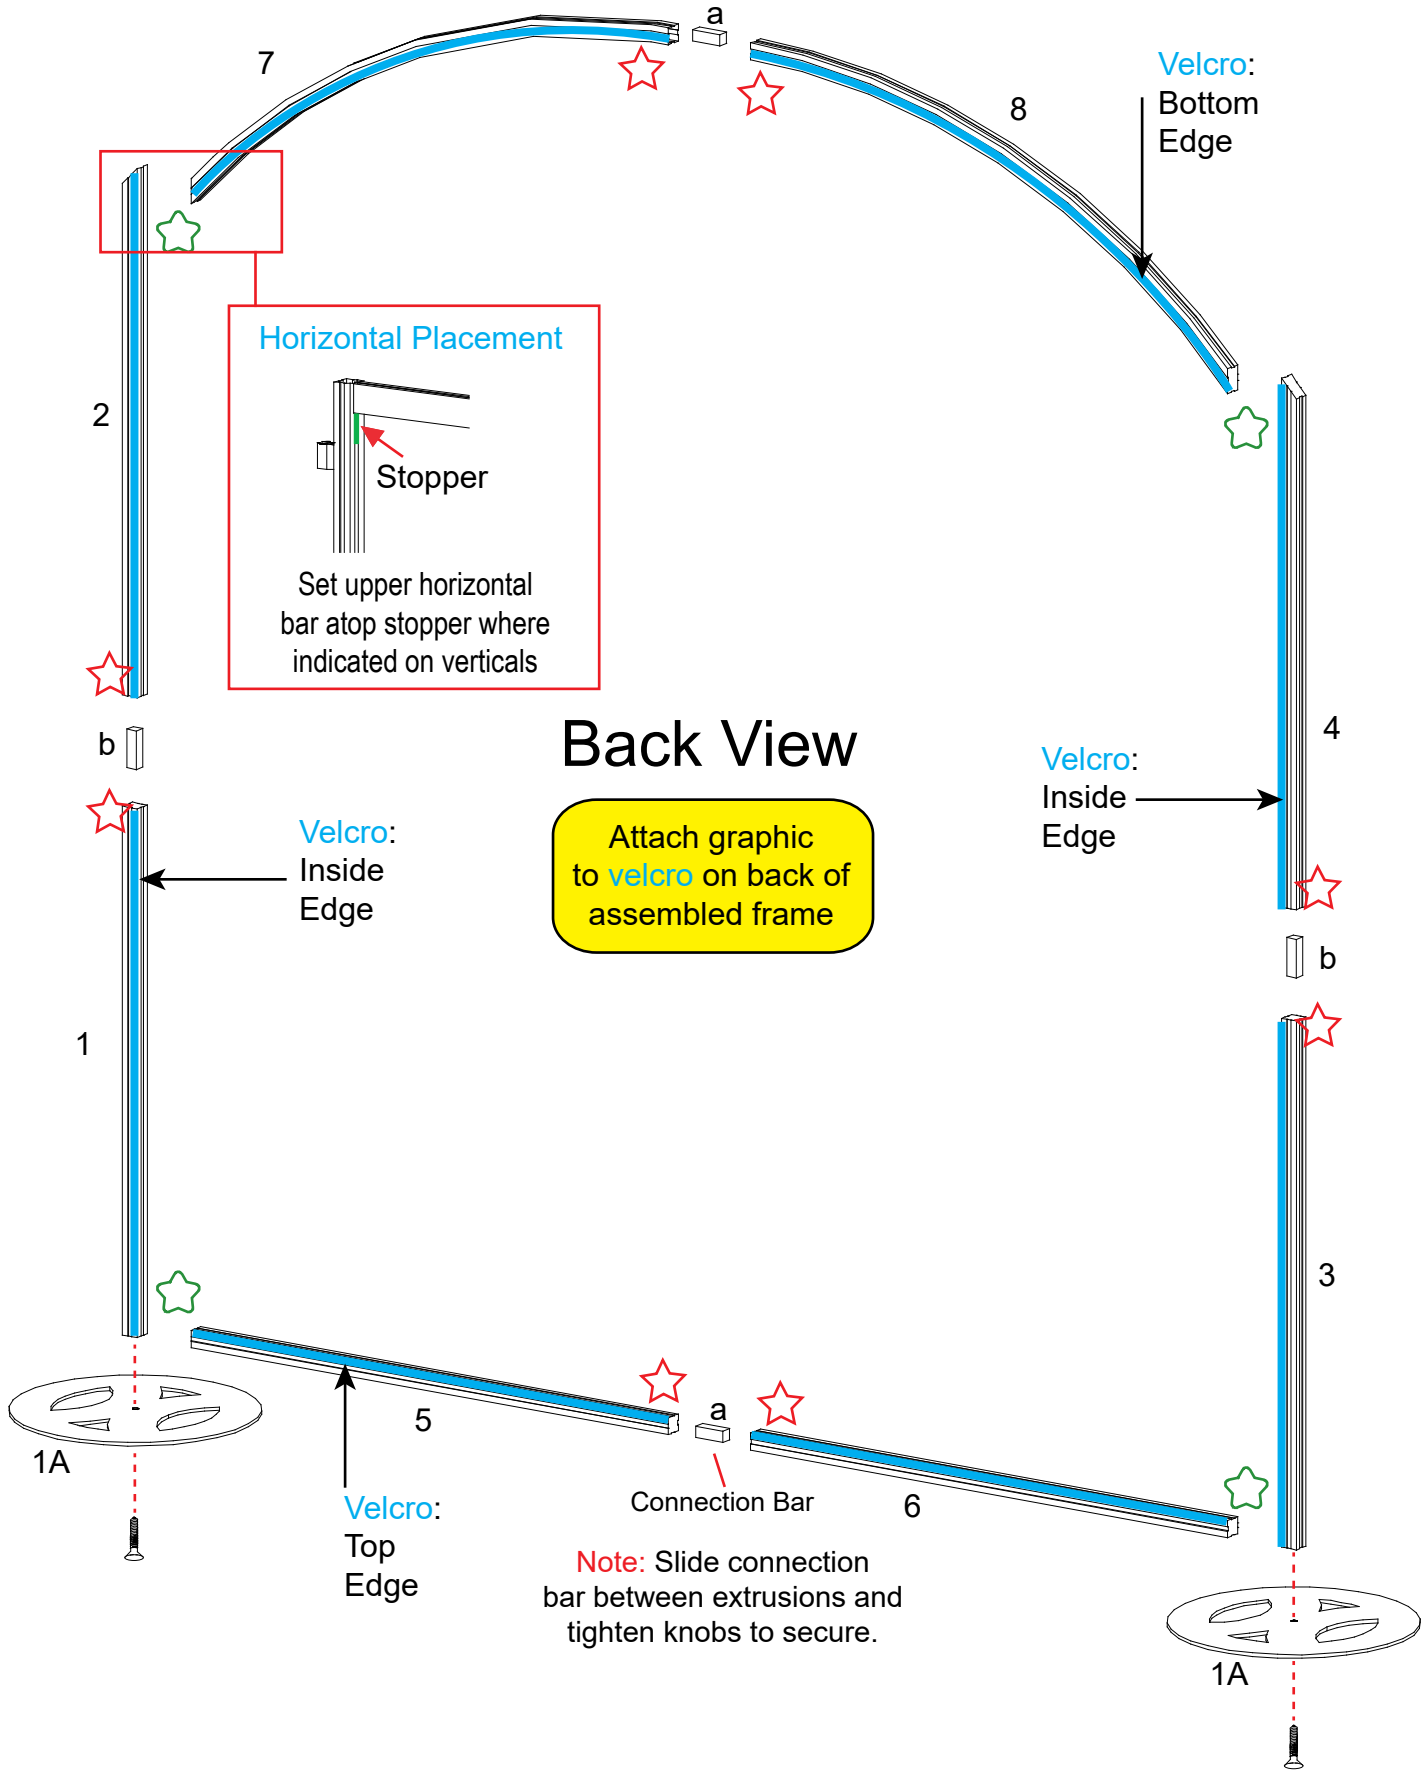


★ indicates location of connection lock with knob.




- Steps:
- 1) Attach A10 Clips and wing graphics as shown in *Wing Attachment* detail.
  - 2) Connect stand off barrels to backwall then attach circle graphic as shown in *Graphic Attachment* detail.
  - 3) Attach Light atop display as shown in *Light Connection* detail.

Wing Attachment



Slide A10 Clamp into groove of square extrusion.

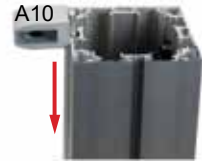

When desired location is found, tighten set screw to secure.

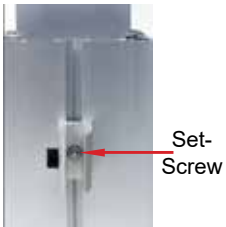


Tighten black plastic set screw to secure Wing in place.

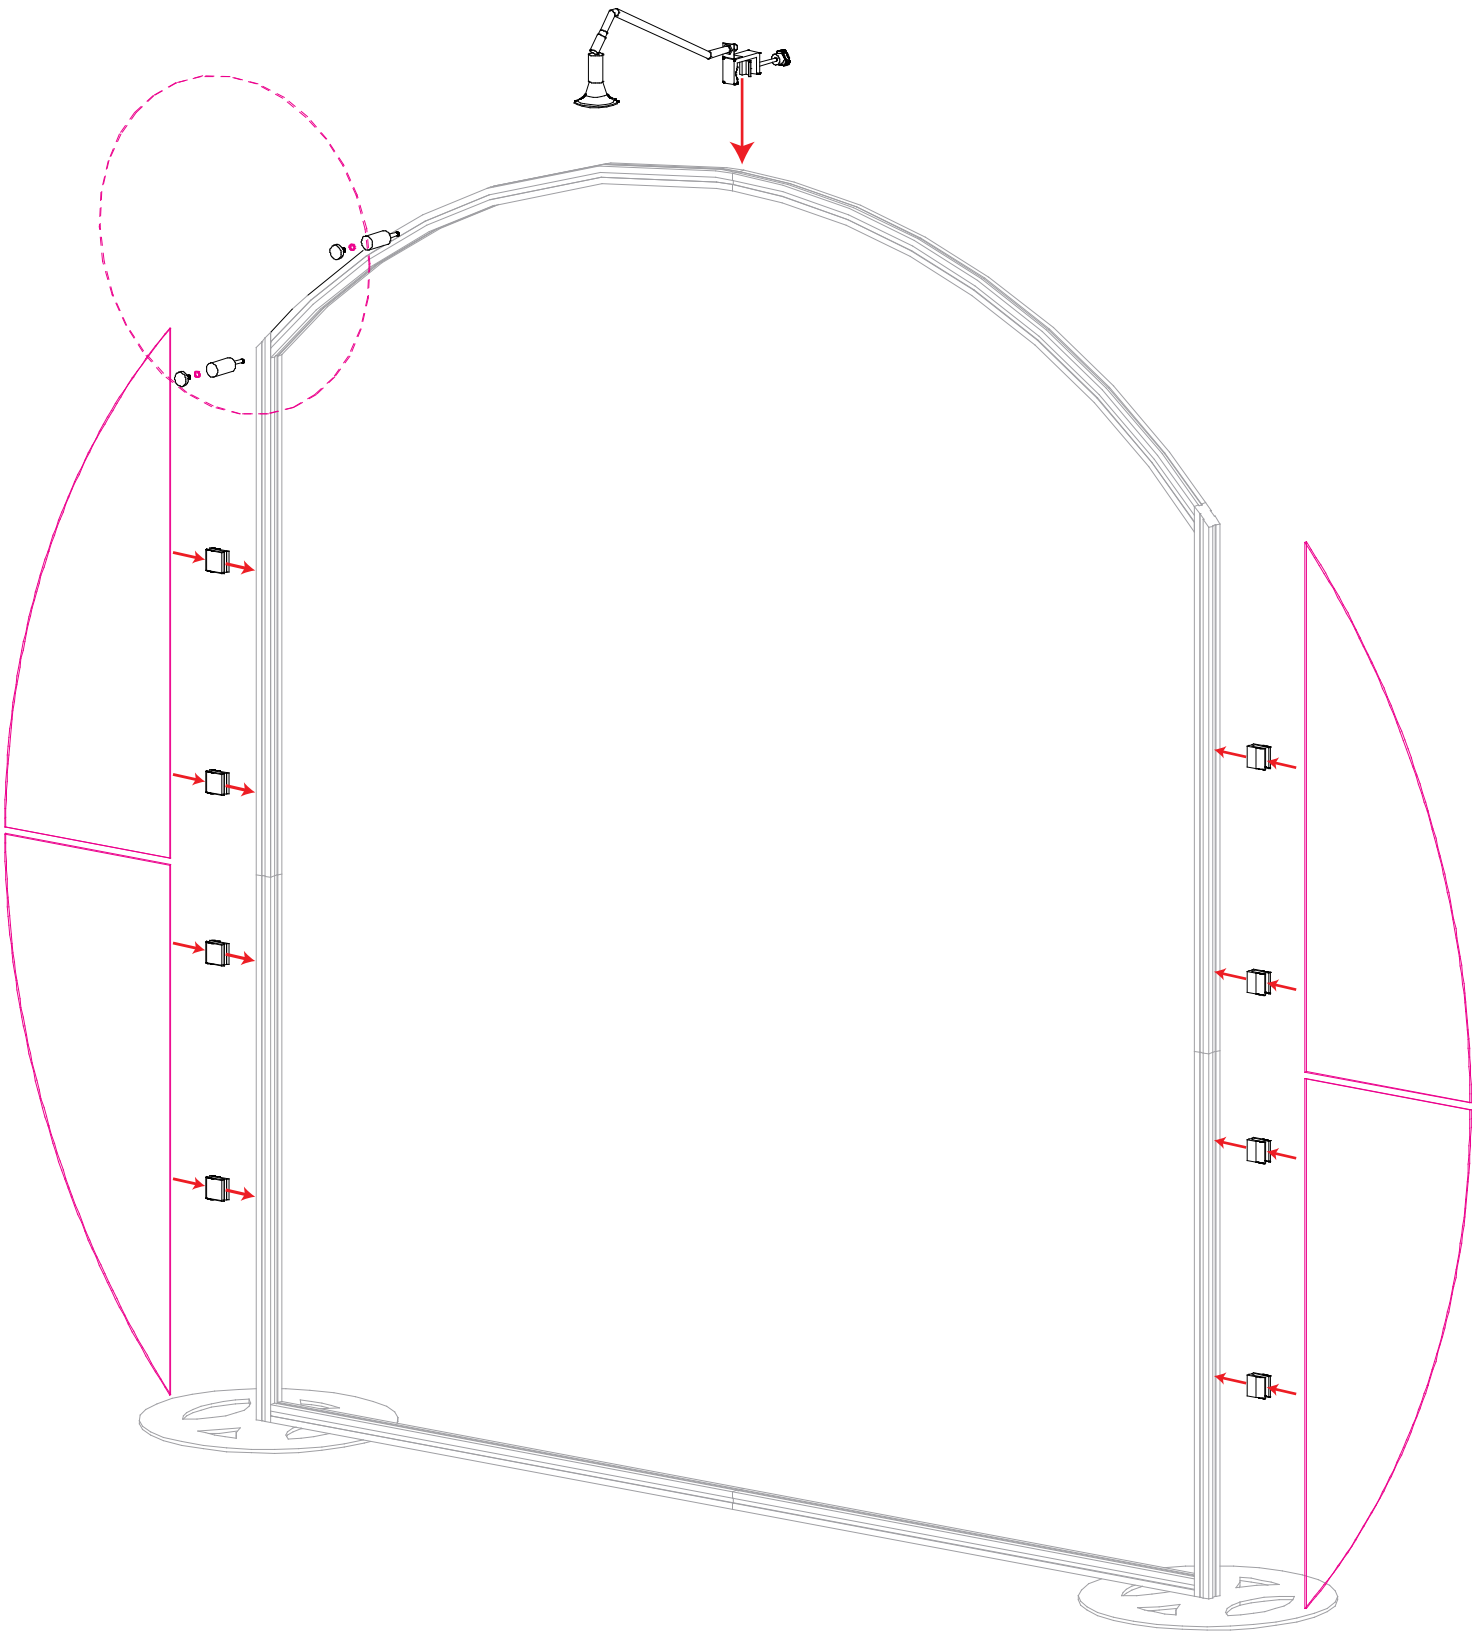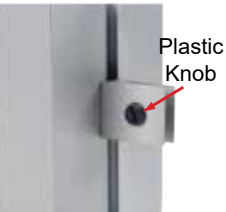


When assembled

Light Connection

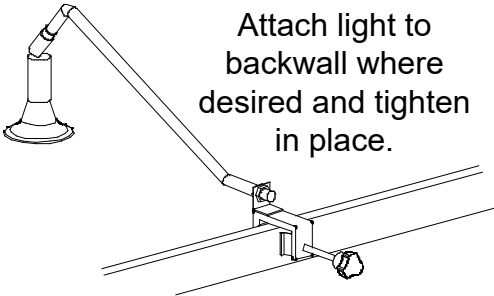

Attach light to backwall where desired and tighten in place.

Graphic Attachment

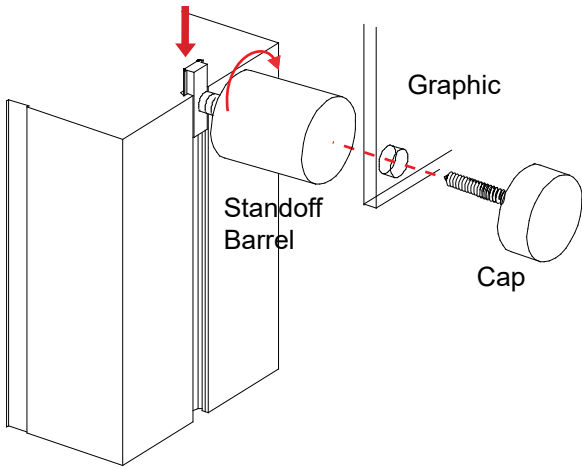

Slide connector on back of standoff barrels into groove of extrusion and twist to secure in place. Secure graphic to standoffs using screw caps.

| Item | Qty. | Description                |
|------|------|----------------------------|
| 9    | 2    | 11.5" Horizontal Extrusion |
| 10   | 2    | 26.75" Curved Extrusion    |
| 11   | 2    | 20.3" Curved Extrusion     |




- Steps:
- 1) Attach Curved extrusions [10,11].
  - 2) Attach horizontal extrusion [9] to [10/11].
  - 3) Connect [9/10/11] to vertical extrusion as shown.
  - 4) Screw in top plate to curved extrusion [10] as shown.
  - 5) Connect counter top as shown in detail below.
  - 6) Attach monitor mounts as shown in detail.

**Note:** Curved extrusion [10] and horizontal [11] stay assembled for shipping and packing.

**Counter Top Attachment**


Insert screws located on underside of counter into holes on flange plate and secure with wing nuts.

Wing Nut

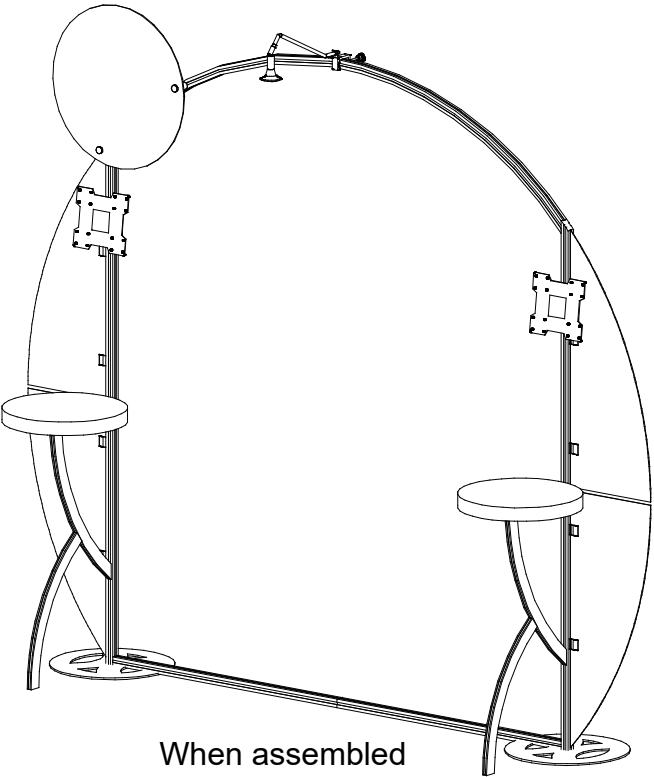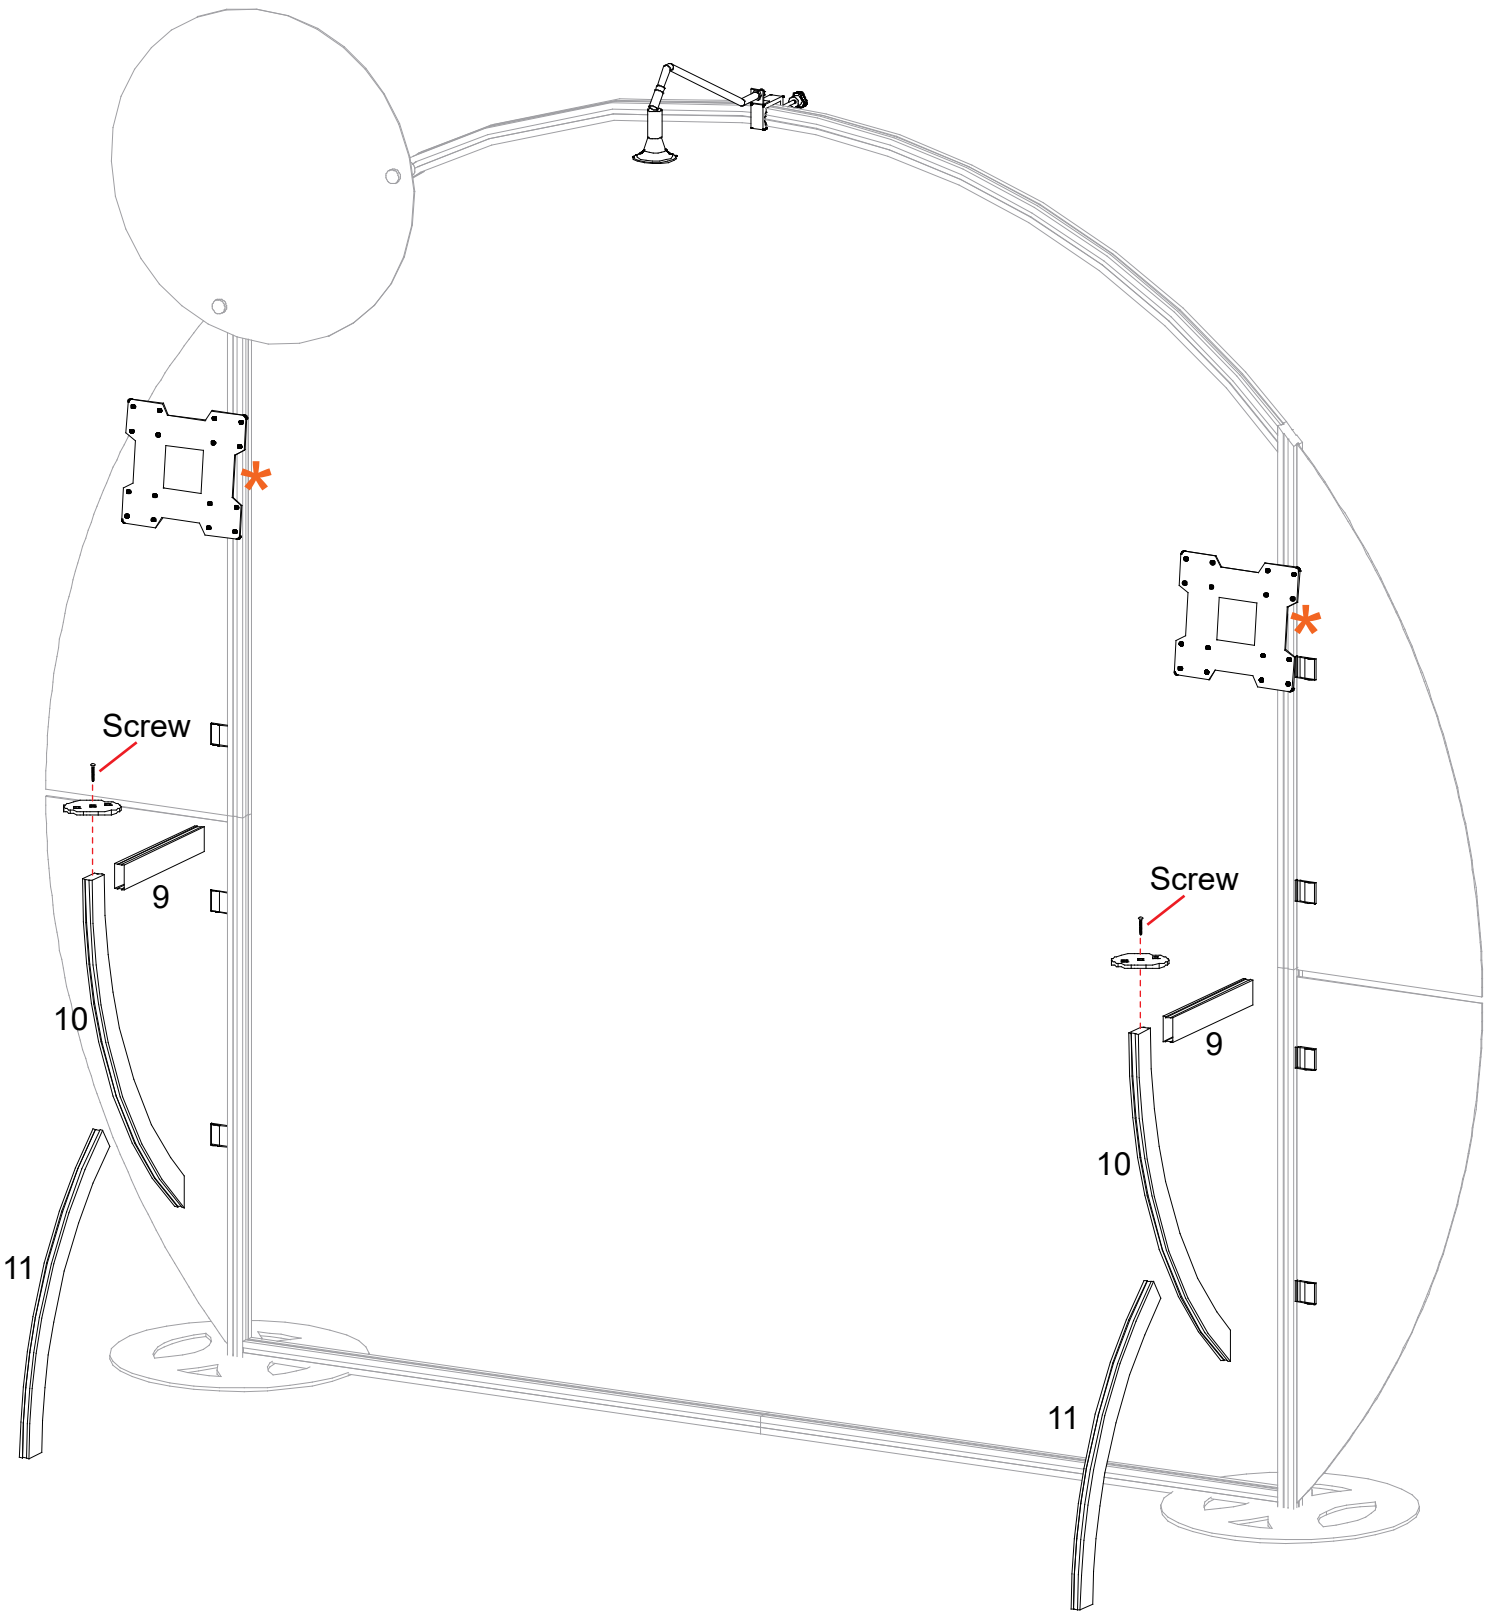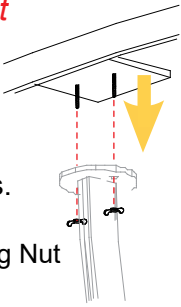



**Monitor Mount Attachment**

Attach monitor mount back plate to connectors using setscrews provided.

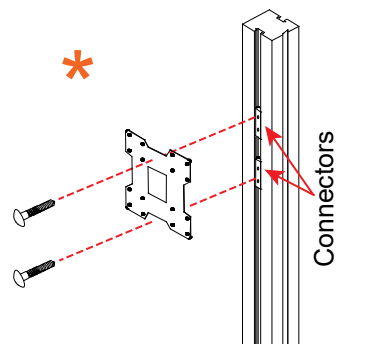

| Item  | Qty. | Description                   |
|-------|------|-------------------------------|
| 1-2   | 1ea. | 38" Vertical Extrusion w/ cut |
| 3-4   | 1ea. | 38" Vertical Extrusion        |
| 5     | 1    | 18.9" Horizontal Extrusion    |
| 6-7   | 1ea. | 18" Horizontal Extrusion      |
| 8     | 1    | 20" Horizontal Extrusion      |
| 9     | 1    | 22.5" Curved Extrusion        |
| 10-11 | 1ea. | 18" Horizontal Extrusion      |
| 12    | 1    | 20" Horizontal Extrusion      |

- Steps:
- 1) Attach lower horizontals [5,6,7,8] between verticals [1,2,3,4] as shown.
  - 2) Attach door using pins as shown in *Door Attachment* detail.
  - 3) Insert infills as shown.
  - 4) Attach upper horizontals [9,10,11,12] between verticals.
  - 5) Place counter on top.

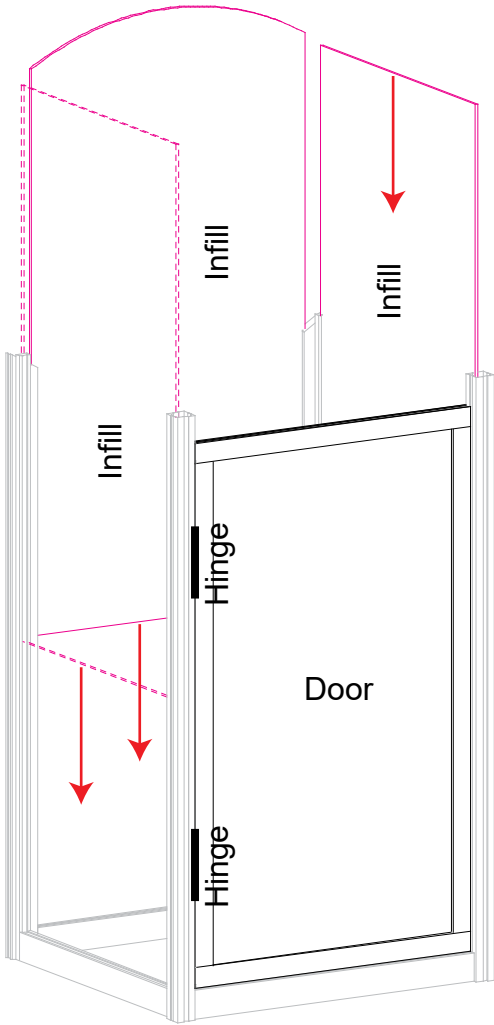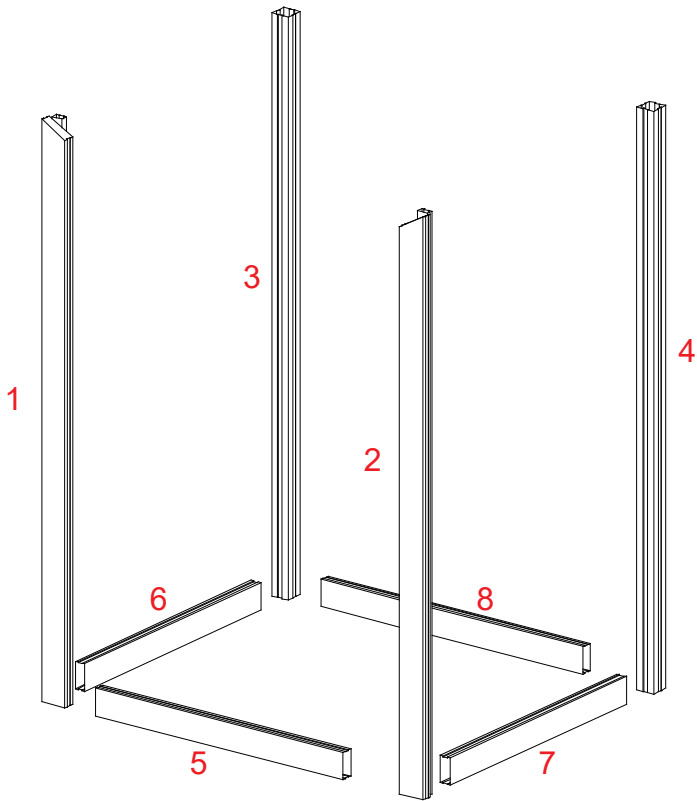

*Door Attachment*

Slide pin into hinge attached to vertical.  
Slide door hinge atop pin.

