



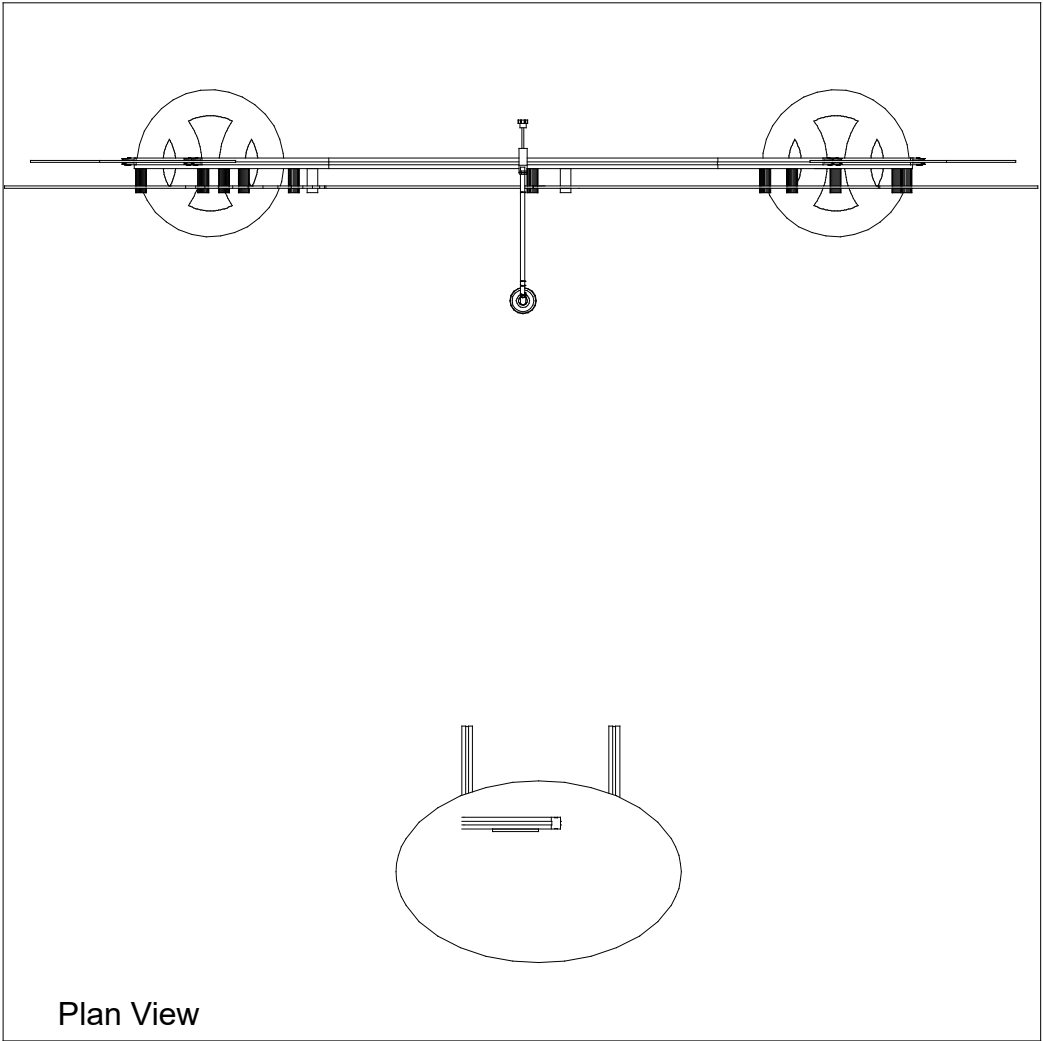


10'

Plan View

10'

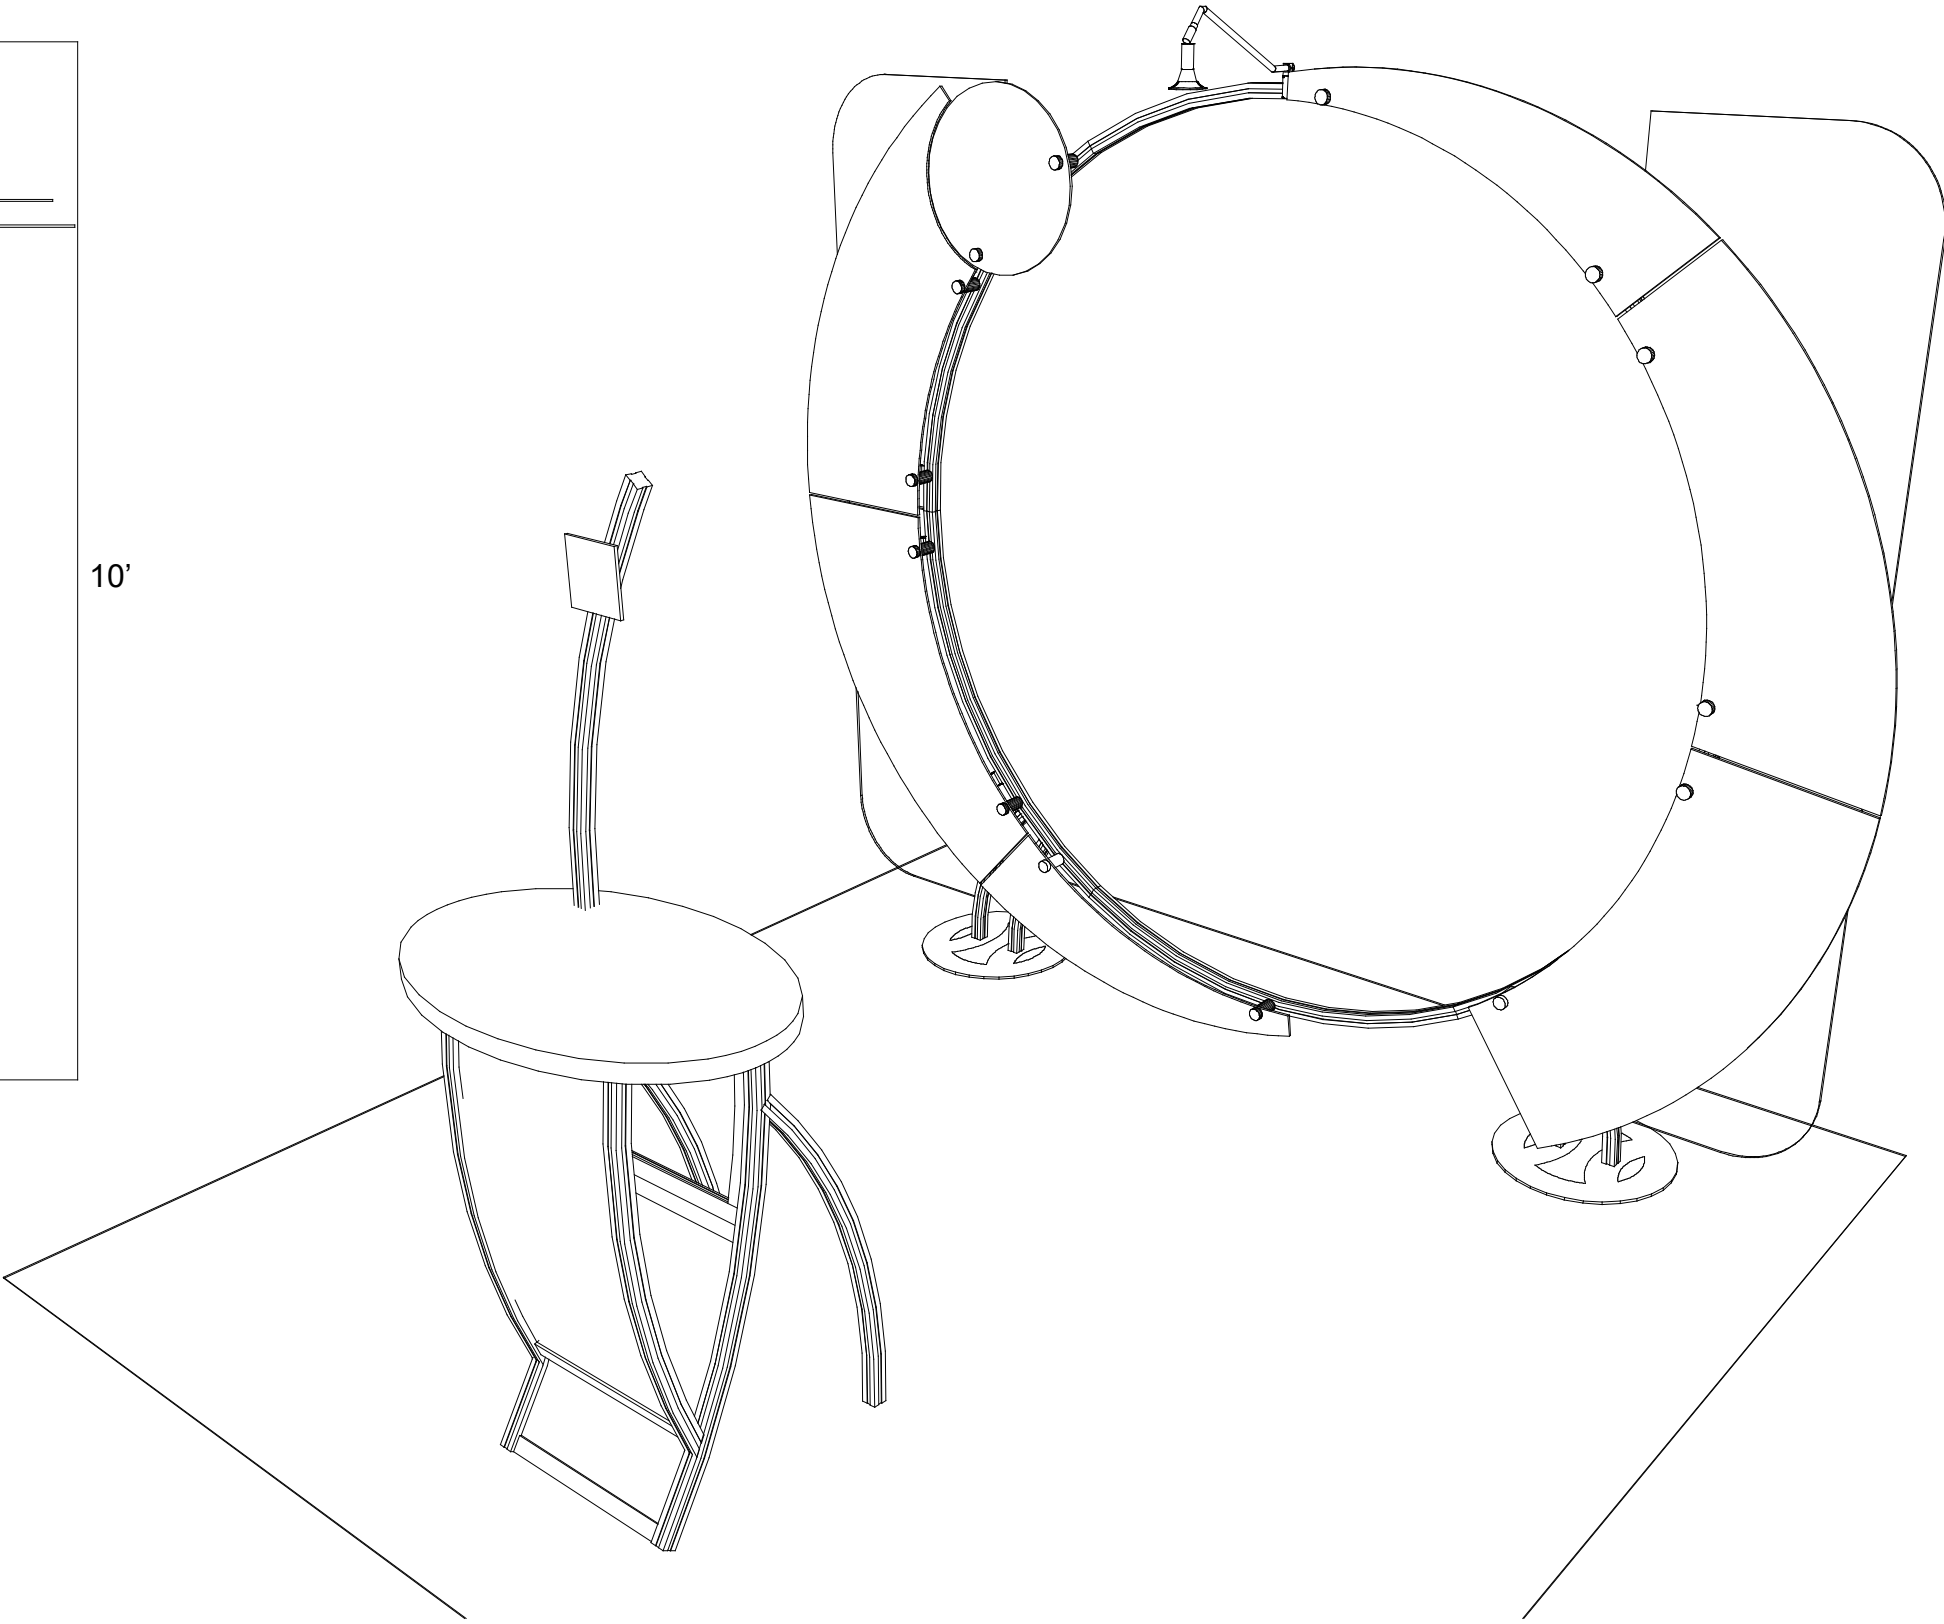

***SETUP INSTRUCTIONS***

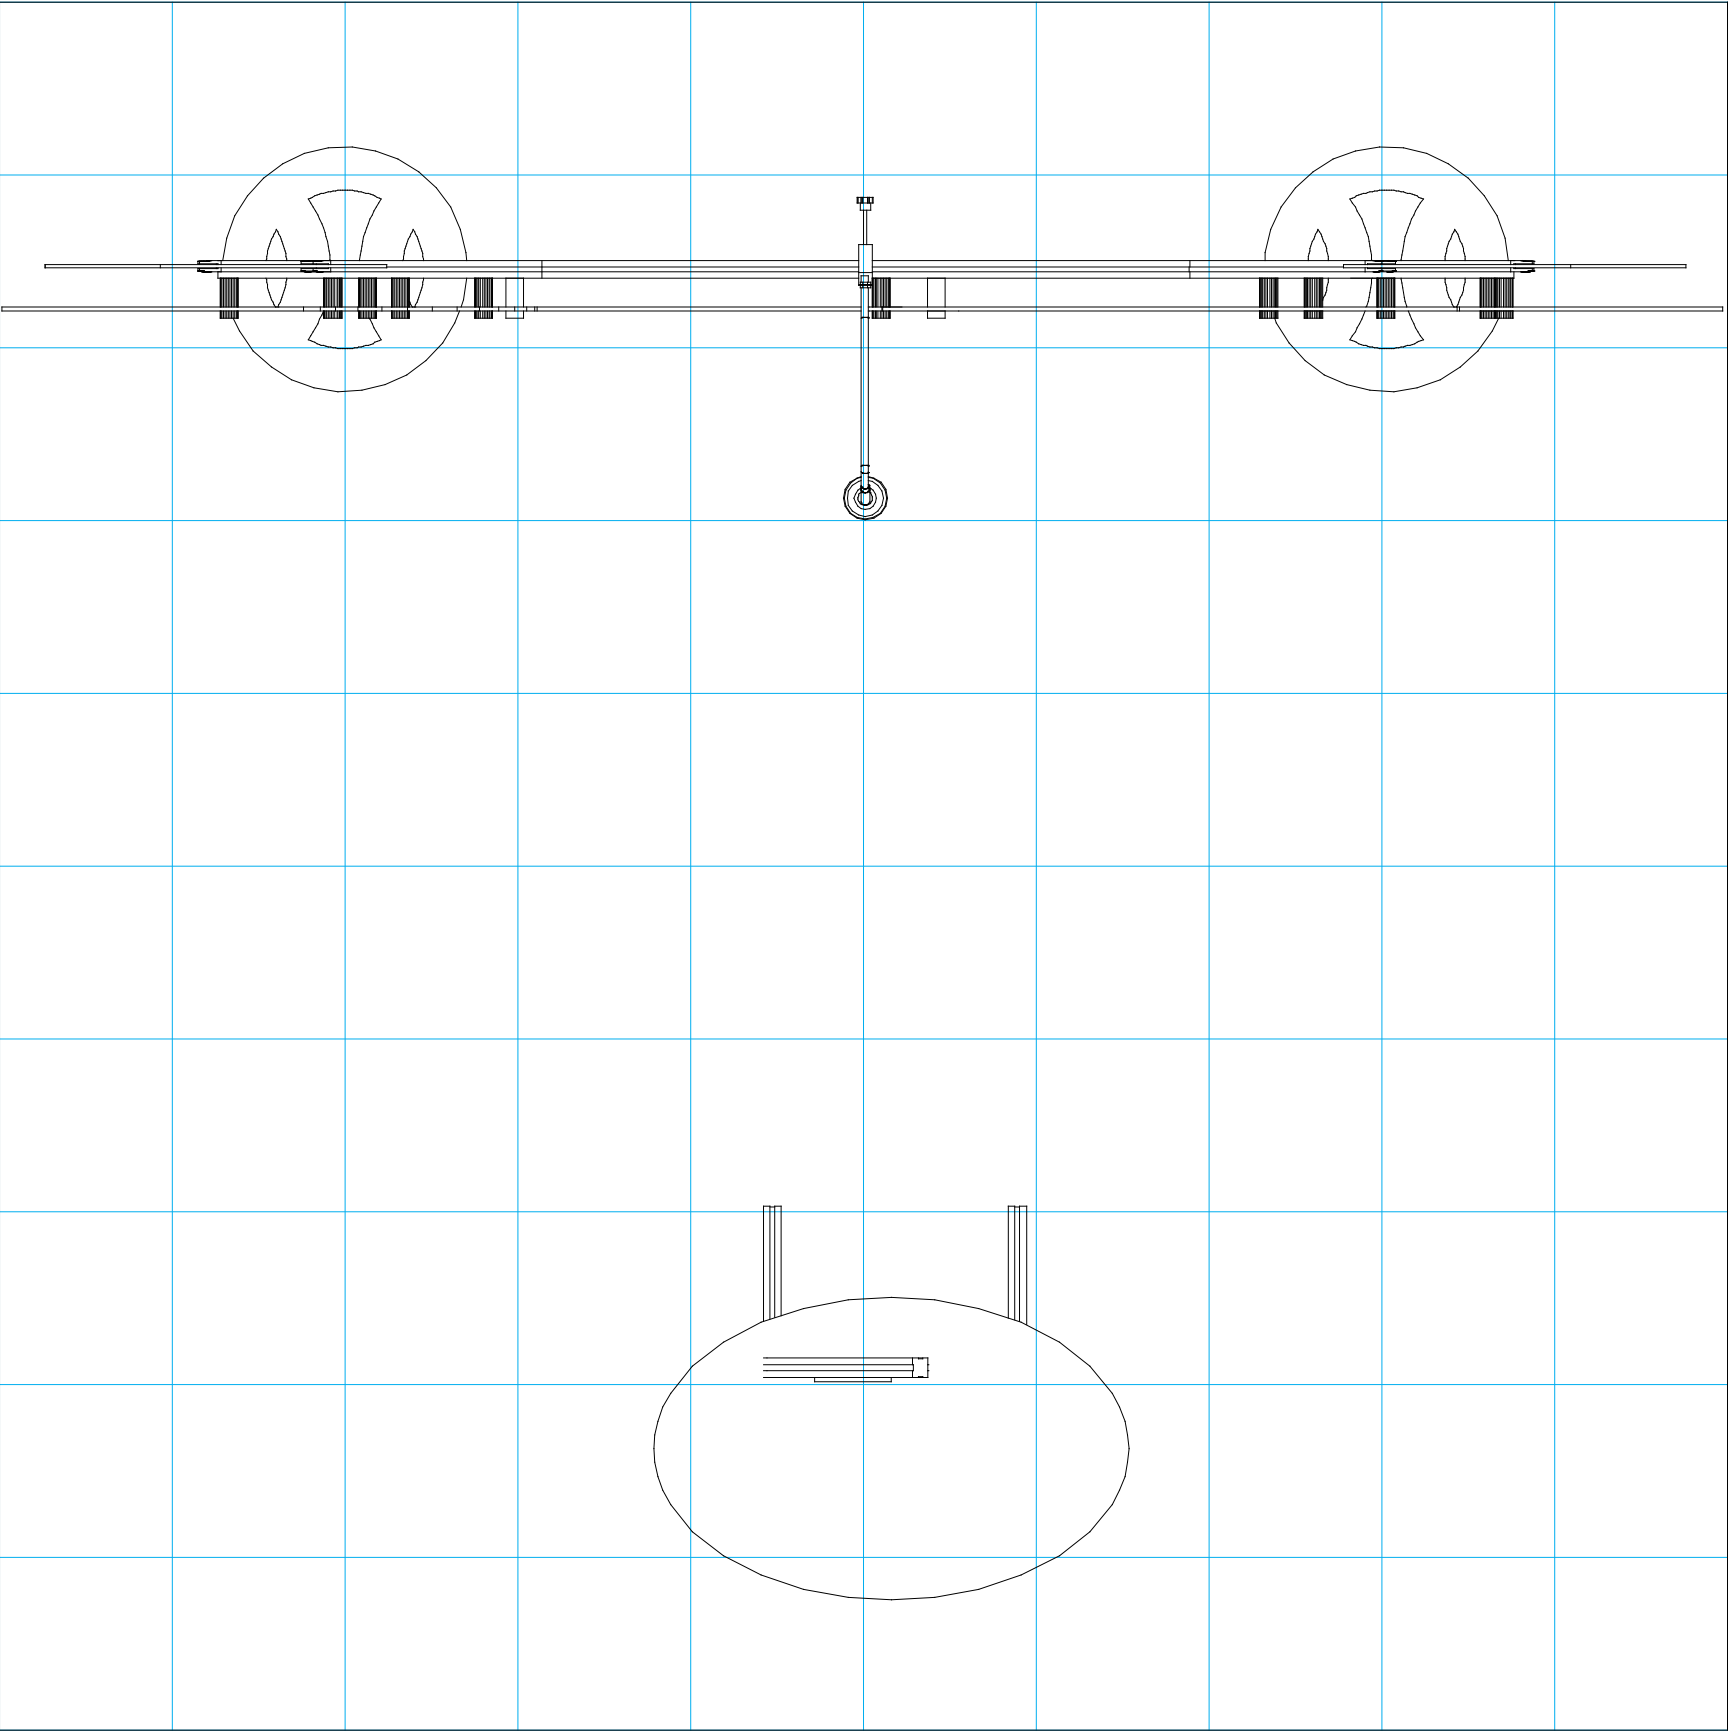

= 1 sq foot

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

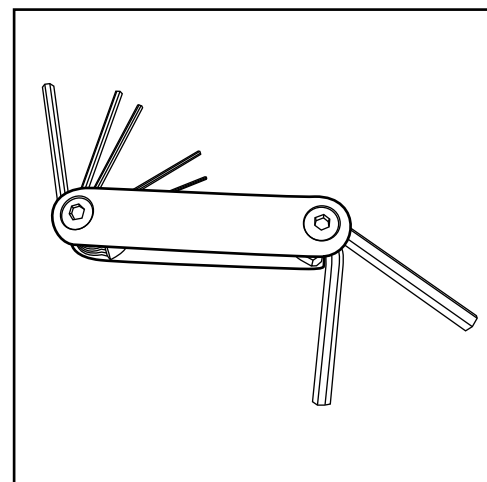


Hex Tool - Essential for Assembly

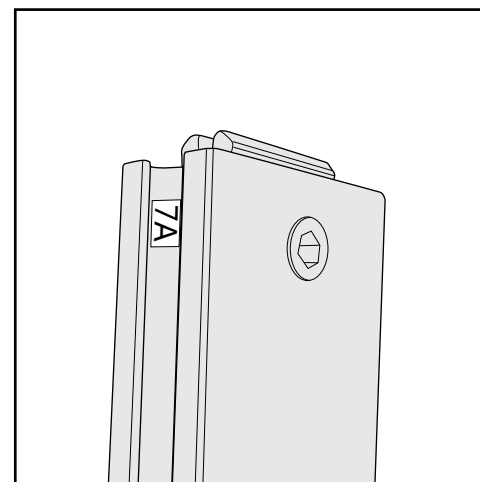


Part Identification - Numbering

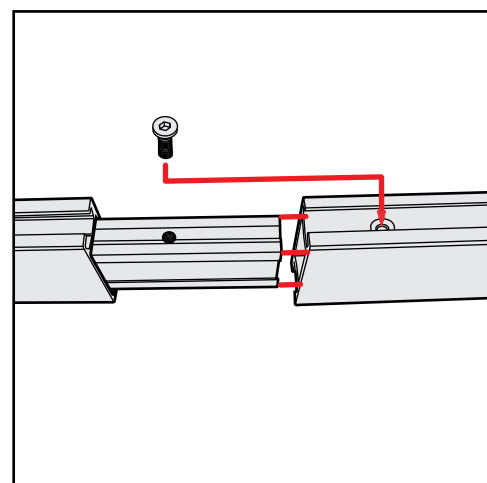


Spline Connection

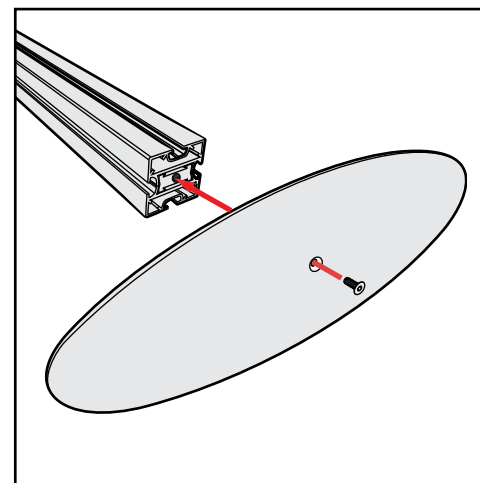

Base Plate & Extrusion Connection

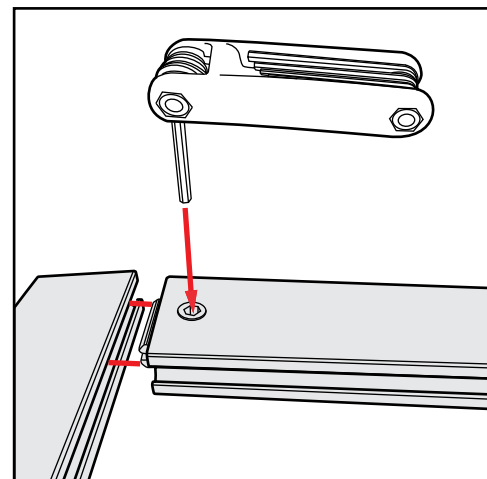


Extrusion & Lock Connection

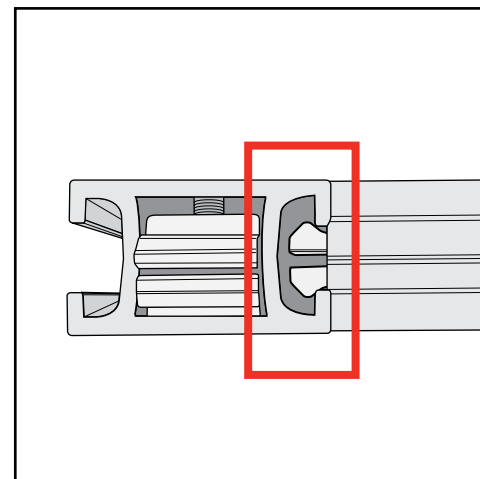

Engaged Lock



# WARNING

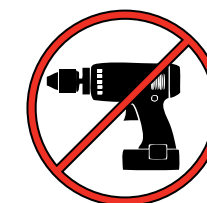

DO NOT USE POWER TOOLS



LADDERS OR LIFTS  
MAY BE REQUIRED



ALL CONNECTIONS MUST  
BE TIGHTLY SECURED





© 2026

**Order #XXXXX    Crate Packing**



CRATE PACKING

| Item | Qty. | Description               |
|------|------|---------------------------|
| 1    | 2    | Base Plate                |
| 2    | 1    | 47.1239" Curved Extrusion |
| 3    | 1    | Curved Leg Assembly       |
| 4    | 1    | 47.1239" Curved Extrusion |
| 5    | 1    | 47.1239" Curved Extrusion |
| 6    | 1    | 47.1239" Curved Extrusion |
| 7    | 1    | Curved Leg Assembly       |

- Steps:
- 1) Attach base plates [1] to curved leg assemblies [3,7].
  - 2) Attach curved extrusion [2] between two leg assemblies [3,7].
  - 3) Attach other curved extrusions between two leg assemblies [3,7].

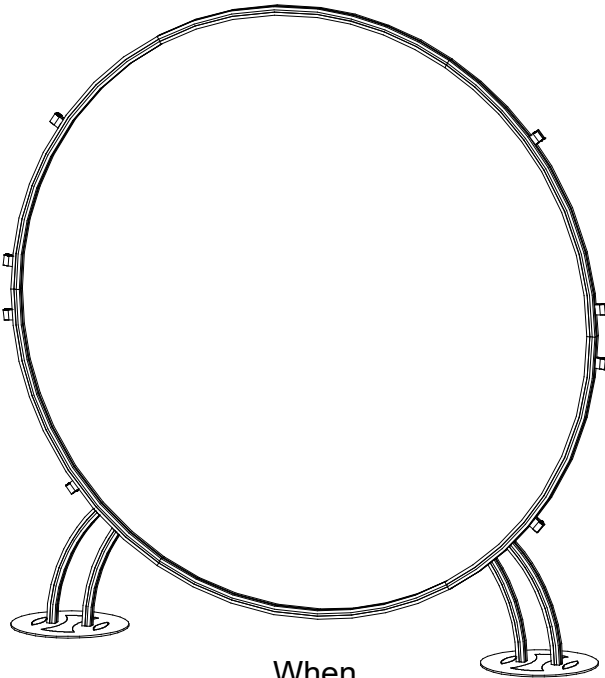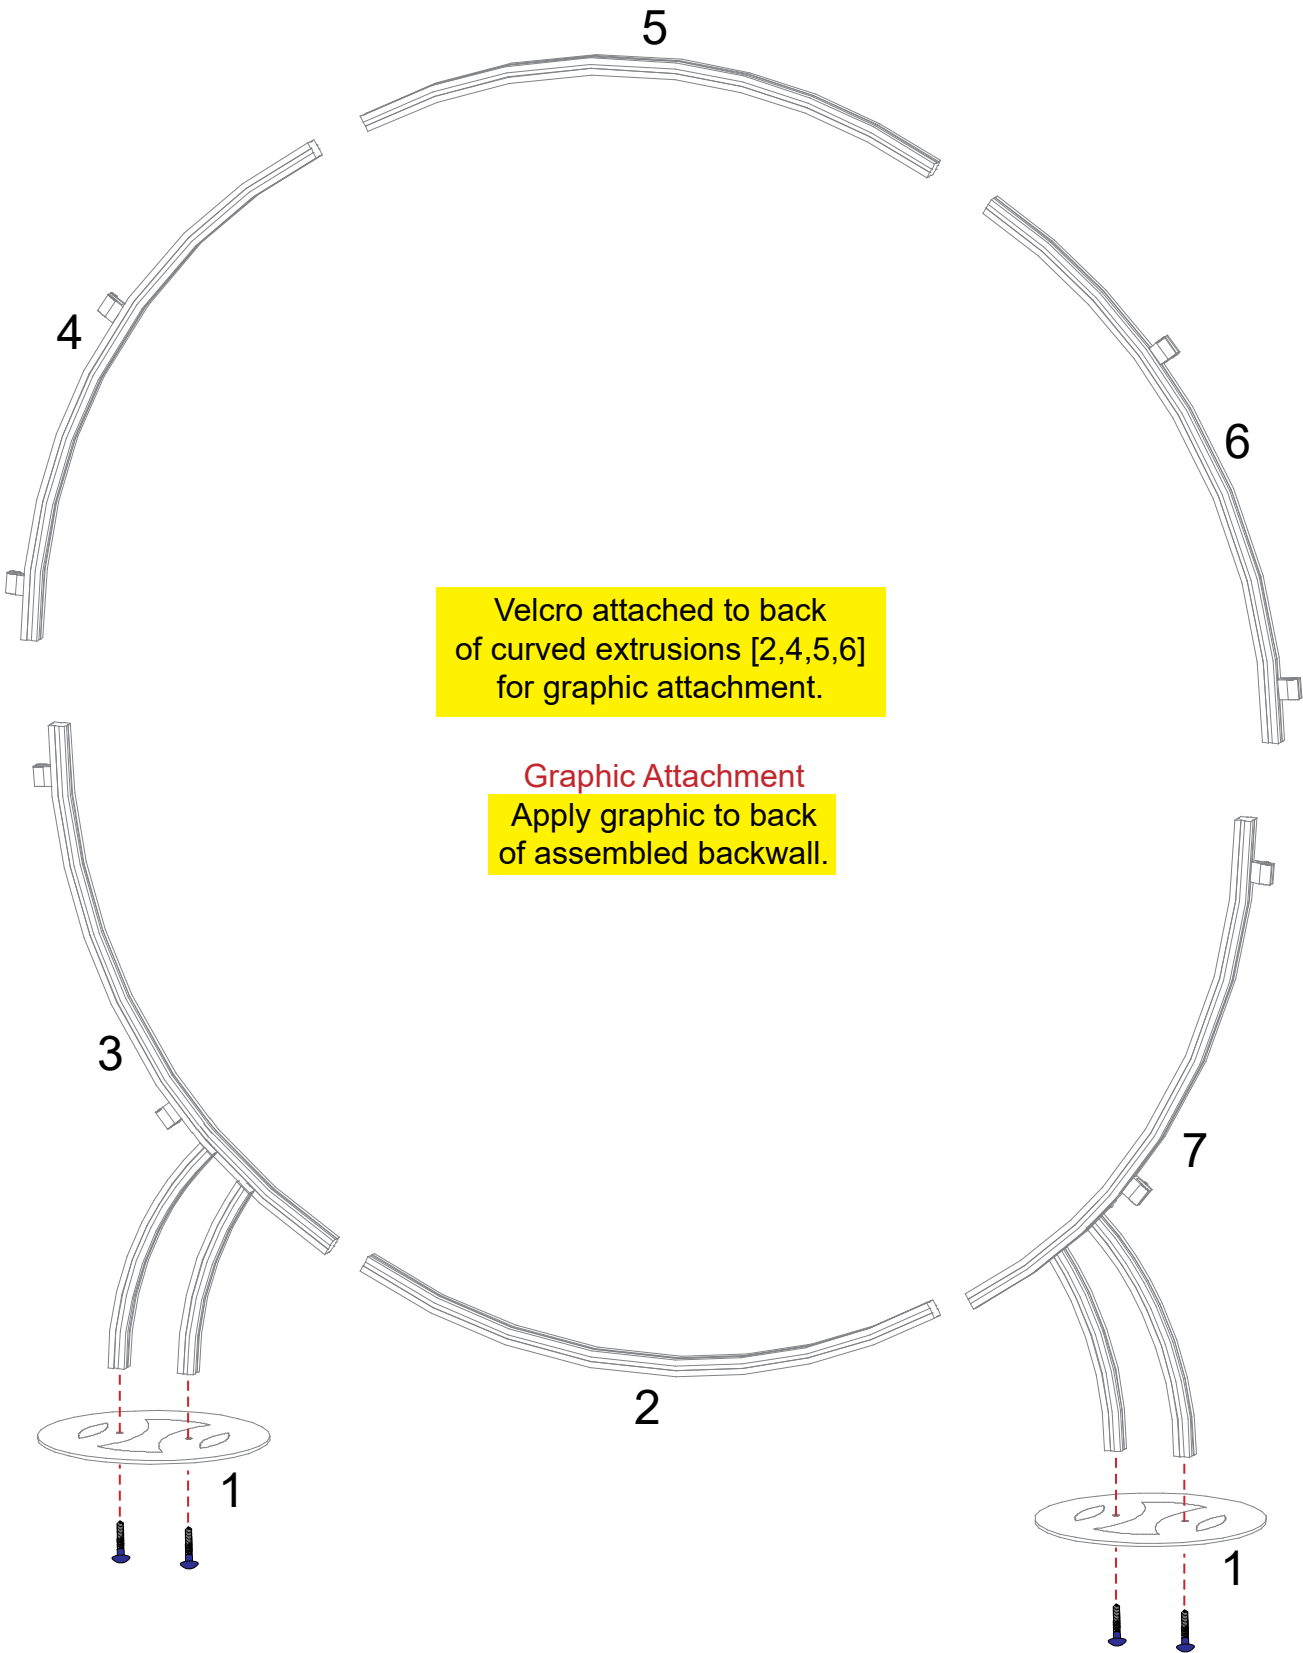


- Steps:
- 1) Attach wings to assembled round frame as shown. Refer to A10 clamp detail.

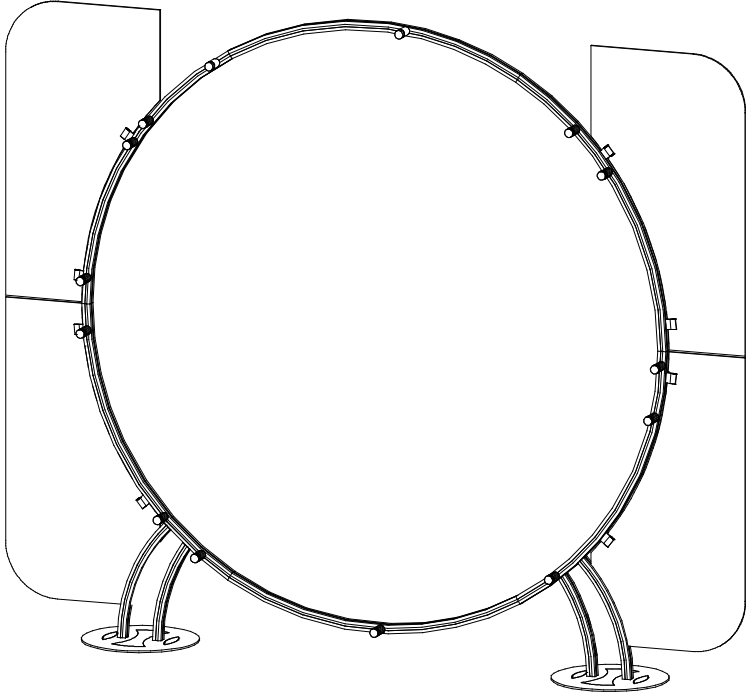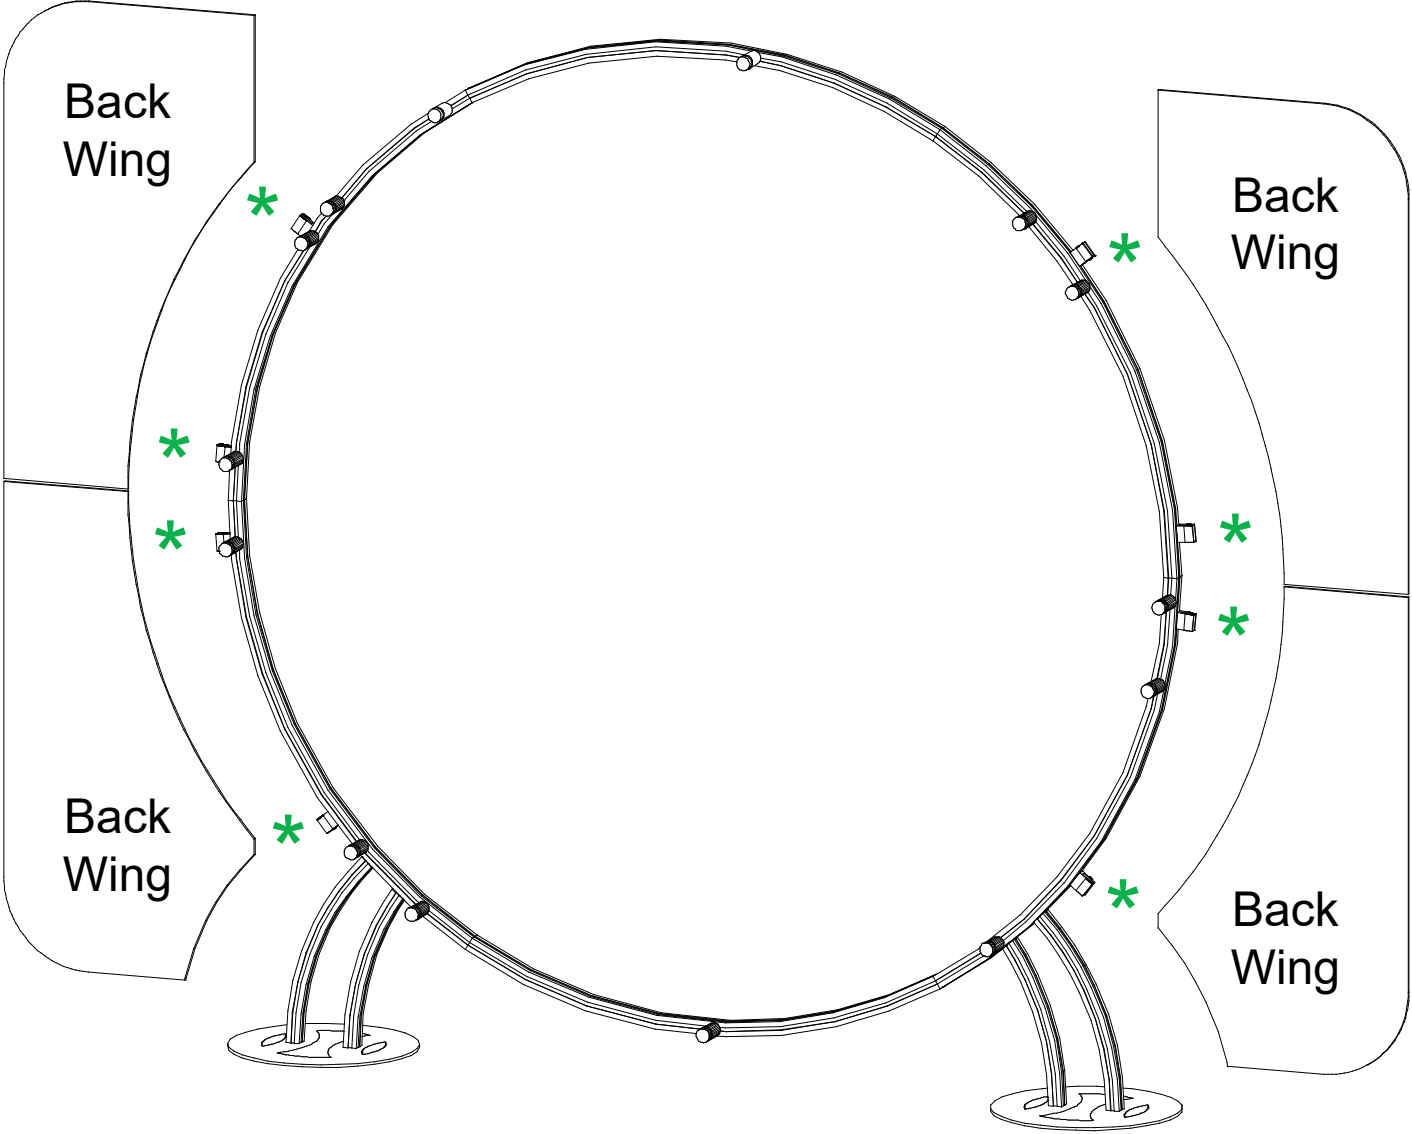

**A10 Clamp Detail**



Tighten set screw to secure A10 to extrusion.




Tighten knob to secure header/wing in place.

Steps:

- 1) Attach front wings and round graphic header to assembled round frame as shown.  
Refer to *Graphic Attachment* detail.
- 2) Attach a light to top of assembled round frame.  
Refer to *Light Connection* detail.

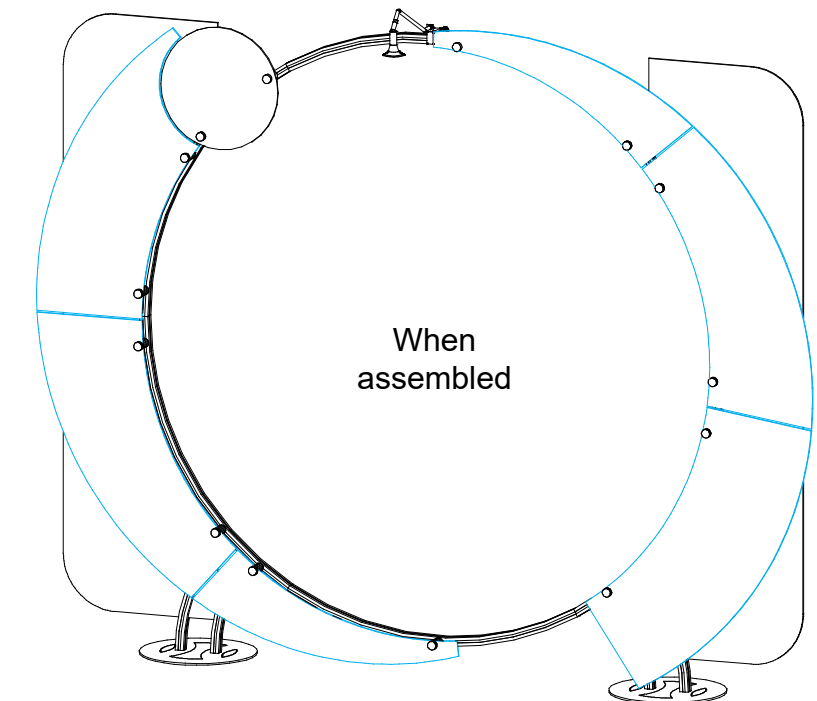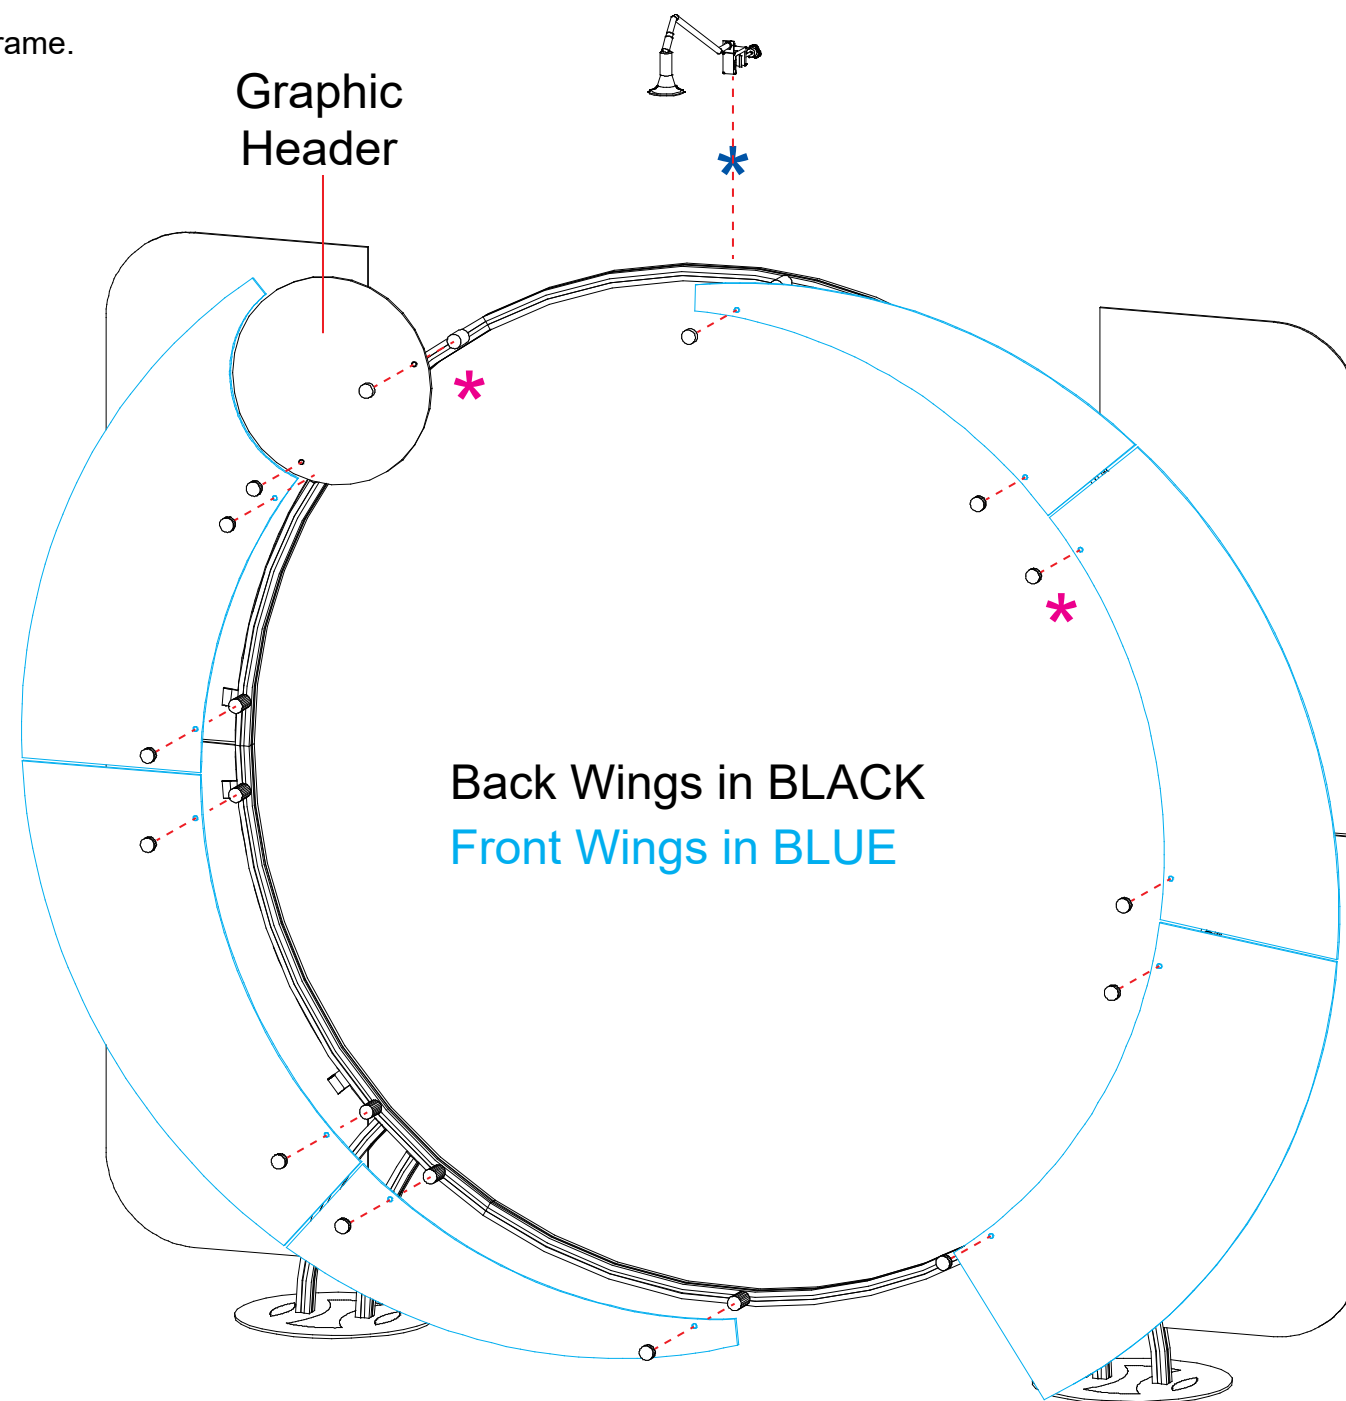


**\* Graphic Attachment**

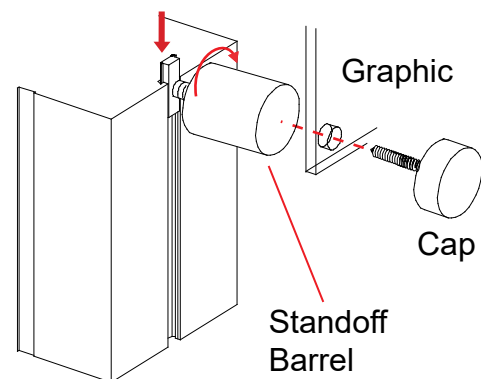

Slide connector on back of standoff barrels into groove of extrusion and twist to secure in place. Secure graphic to standoffs using screw caps.



**Light Connection**

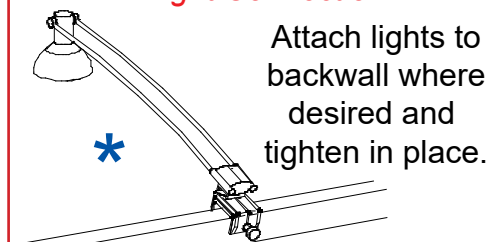

| Part Number | Description                          |
|-------------|--------------------------------------|
| A           | Left Leg Assembly                    |
| B           | Right Leg Assembly                   |
| C           | Horizontal Extrusion                 |
| D           | Horizontal Extrusion w/ Door Stopper |

- Steps:
- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
  - 2) Insert Laminated infill into grooves of leg assemblies [A and B].
  - 3) Attach extrusion door between leg assemblies [A and B] and on top of laminated infill.
  - 4) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].


**NOTE:** Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

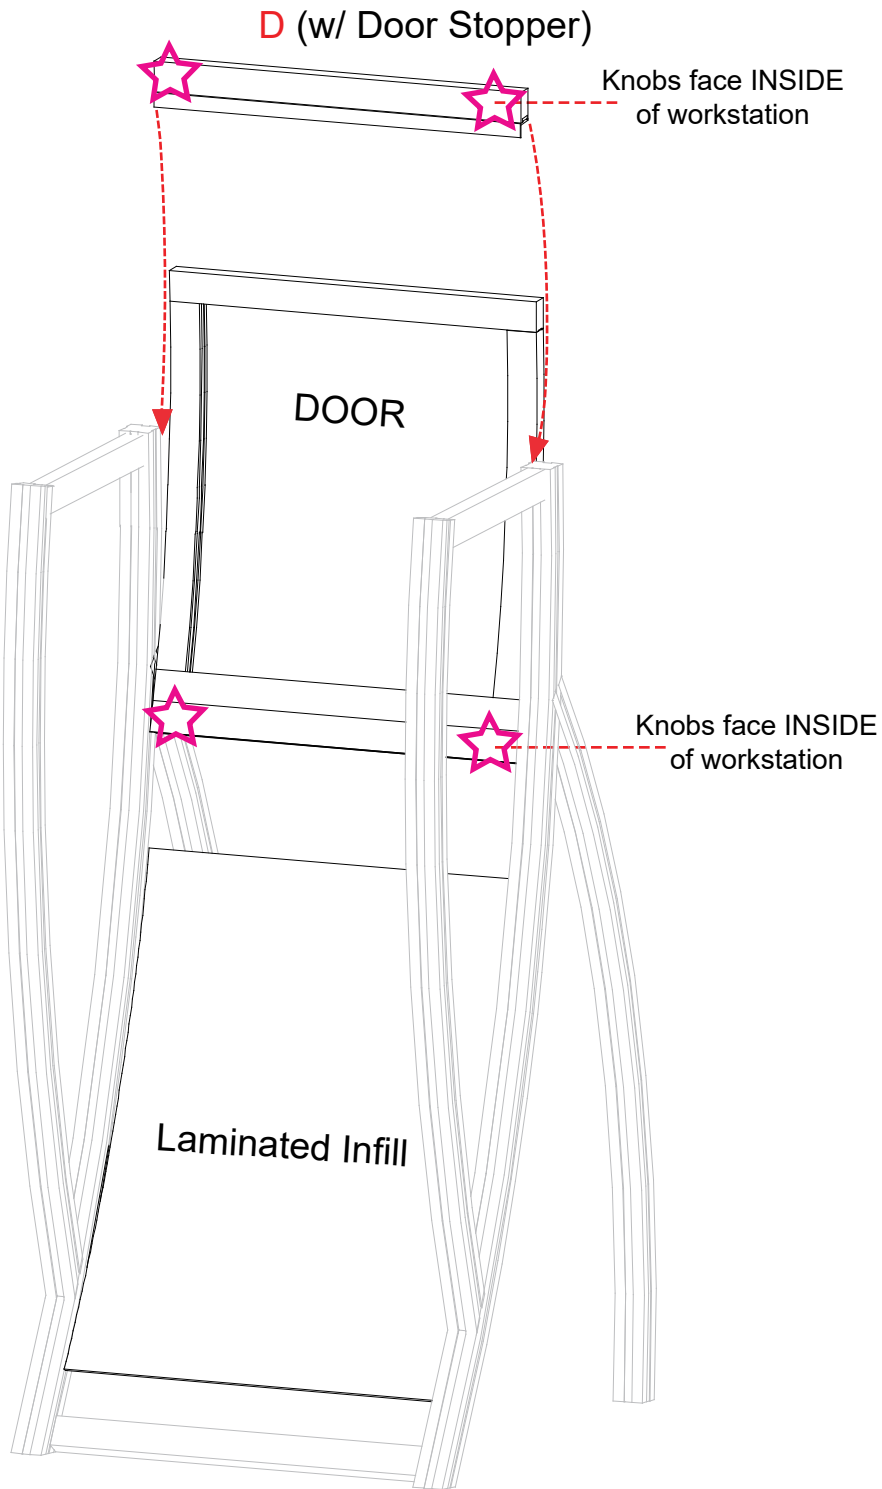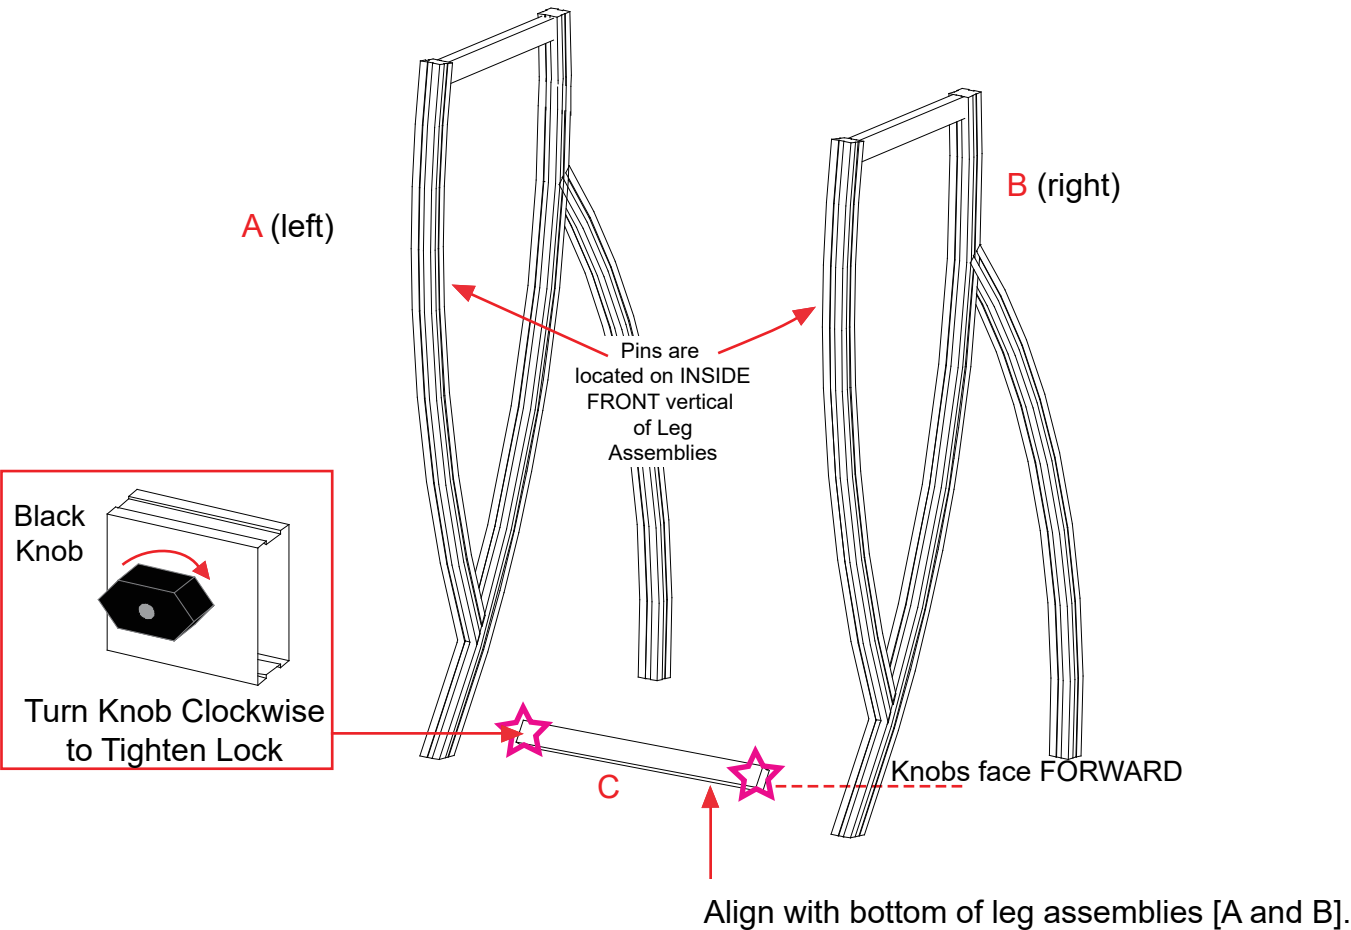


| Part Number | Description          |
|-------------|----------------------|
| E           | Horizontal Extrusion |
| F           | Horizontal Extrusion |

Steps:

- 1) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.
- 2) Insert Laminated infill into grooves of vertical leg assemblies [A and B].
- 3) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] on top of infill.
- 4) Place internal shelf into assembled pedestal on top of pins.
- 5) Set Counter on top of assembled pedestal and secure with Velcro straps attached to underside of top.

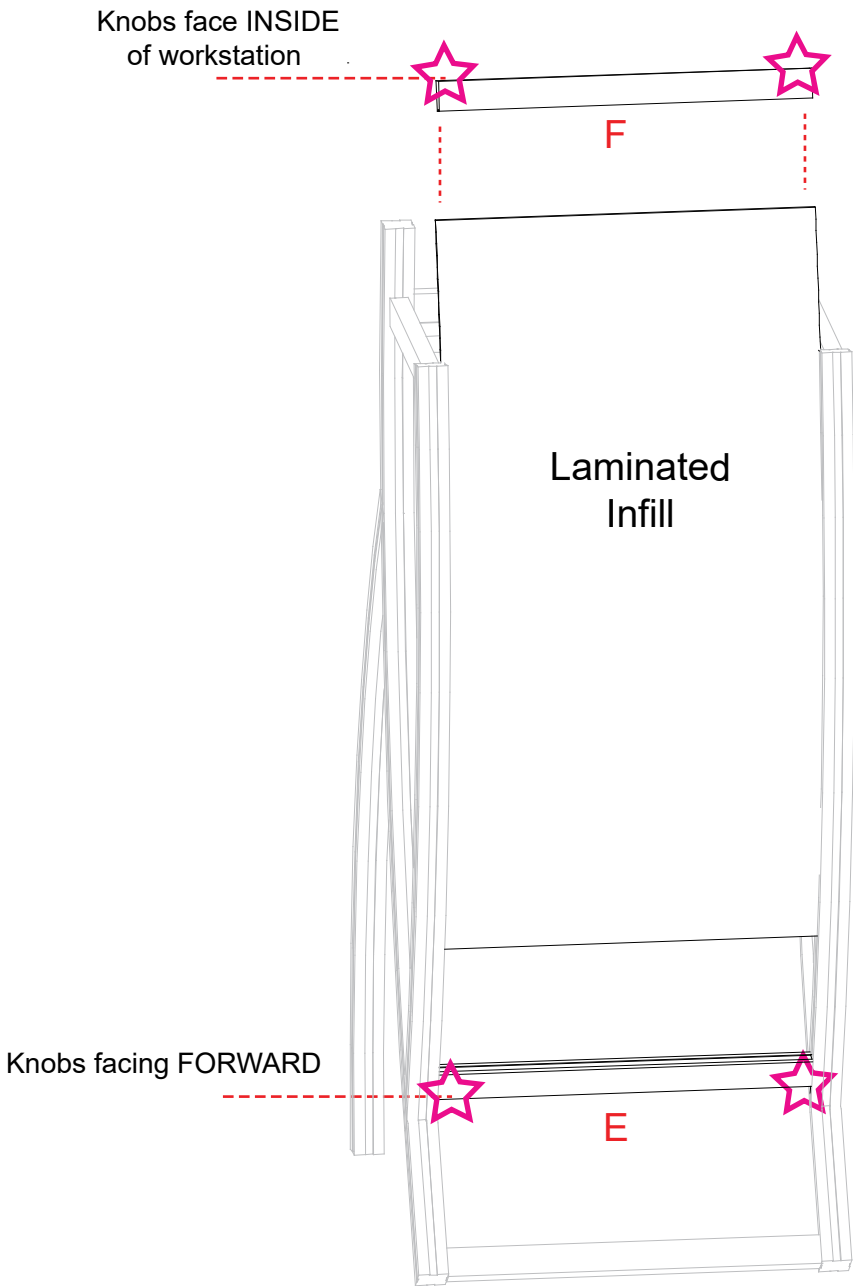

Place internal shelf into workstation then place counter on top of assembled workstation.

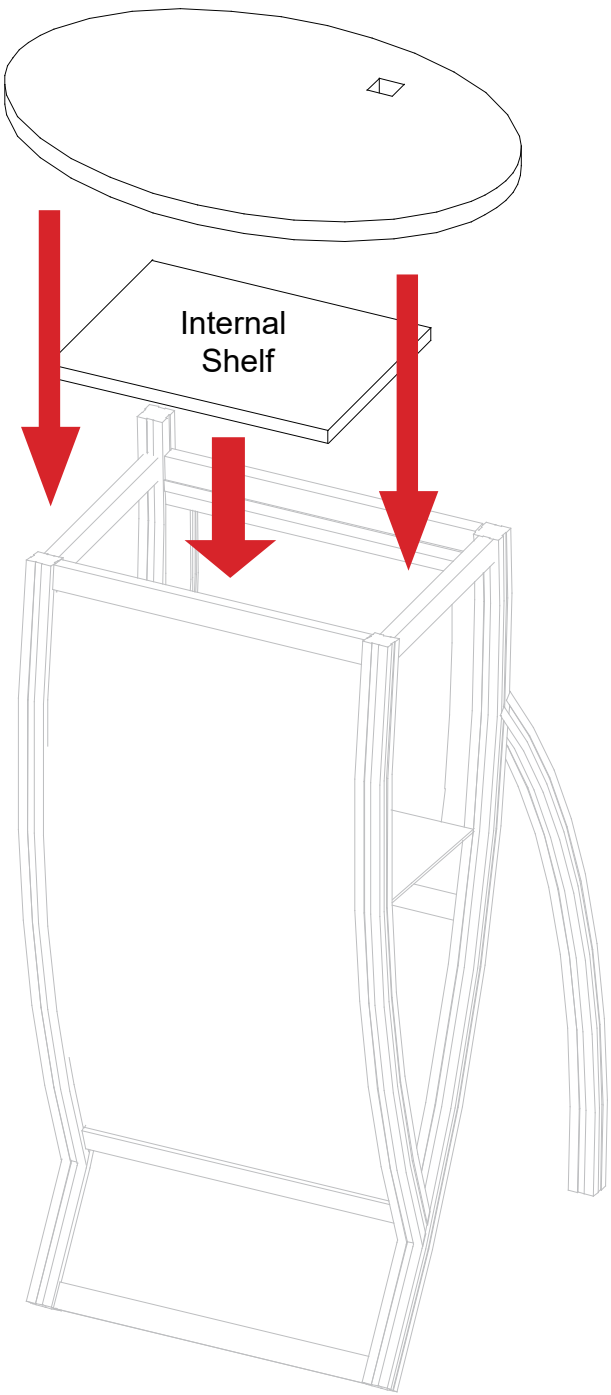


| Part Number | Description                    |
|-------------|--------------------------------|
| G           | Curved Monitor Mount Extrusion |

- Steps:
- 1) Slide Connection Bar into lower leg assembly. Slide upper vertical over bar and secure both.
  - 2) Attach Monitor Mount to vertical as shown in Detail below.


*Monitor Mount Attachment*

NOTE: Monitor mount should be installed while laying down on floor

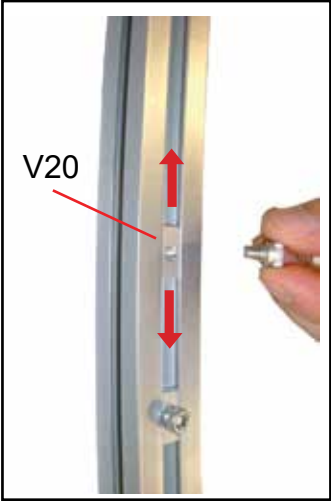

V20

Adjust V20 connector to desired location. Then remove screws.

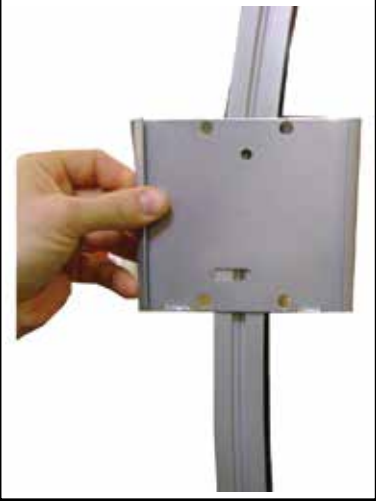

Place mount plate in front of V20 connectors. Then secure with screws.

