



| Item | Qty. | Description                     |
|------|------|---------------------------------|
| 1    | 1    | 13.5"w x 28"h Side Panel        |
| 2    | 1    | 24.5" x 13.5" Bottom Panel      |
| 3    | 1    | 13.5"w x 28"h Side Panel        |
| 4    | 1    | 24.5" x 13.5" Top Panel         |
| 5    | 1    | Left Door Panel                 |
| 6    | 1    | Right Door Panel                |
| 7/7A | 1    | 23"w TSP50 Horizontal Extrusion |
| 8/8A | 1    | 28"w TSP50 Horizontal Extrusion |

\*\* Note: Panels [1-2] and [3-4] are permanently connected with a hinge.

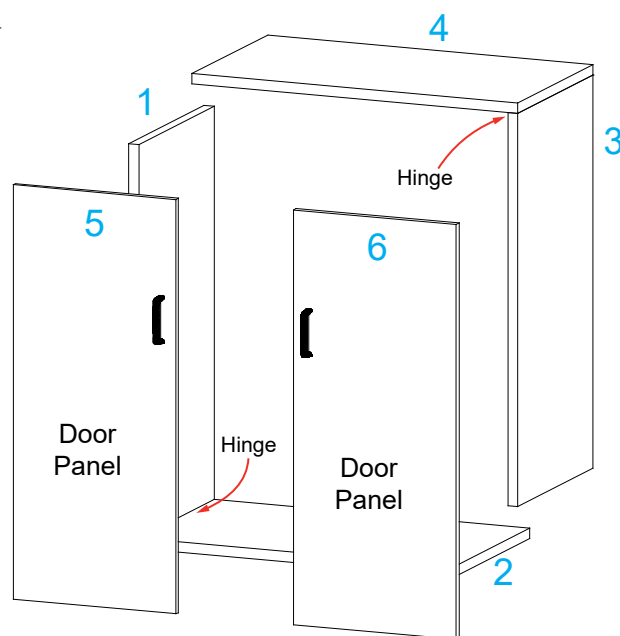


BACK VIEW

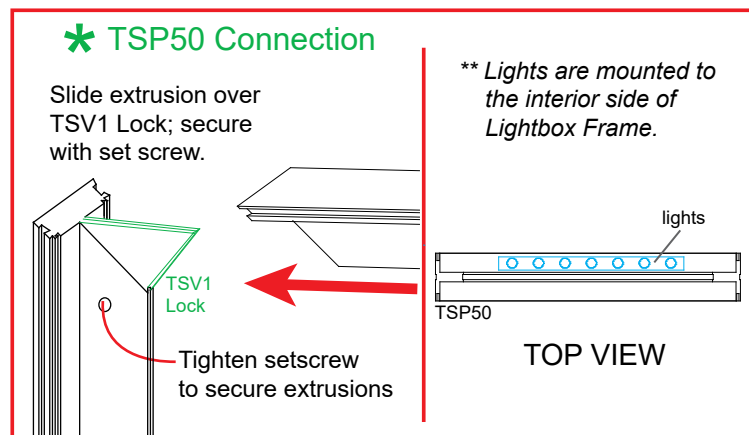


### Steps:


- 1) Connect assembled panels [1/2] & [3/4] together.
- 2) Attach Door Panels [5,6] to assembled counter body.
- 3) Install Legs to bottom of counter using bolts
- 4) Connect threaded stud of Standoff Barrels to nutserts in Counter Top, as shown in detail.
- 5) Attach Counter Top to top panel using bolts as shown.
- 6) Assemble extrusions [7,7A] between extrusions [8,8A]. See TSP50 Corner Connection detail.
- 7) Apply SEG Blocker to back of assembled frame.
- 8) Slide frame assembly into counter body
- 9) Place internal Shelf onto shelf pins attached to side panels.
- 10) Connect power cords to lights as shown.
- 11) Apply SEG Graphic to the front extrusion frame.

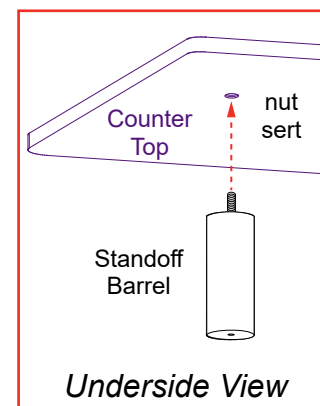

When assembled

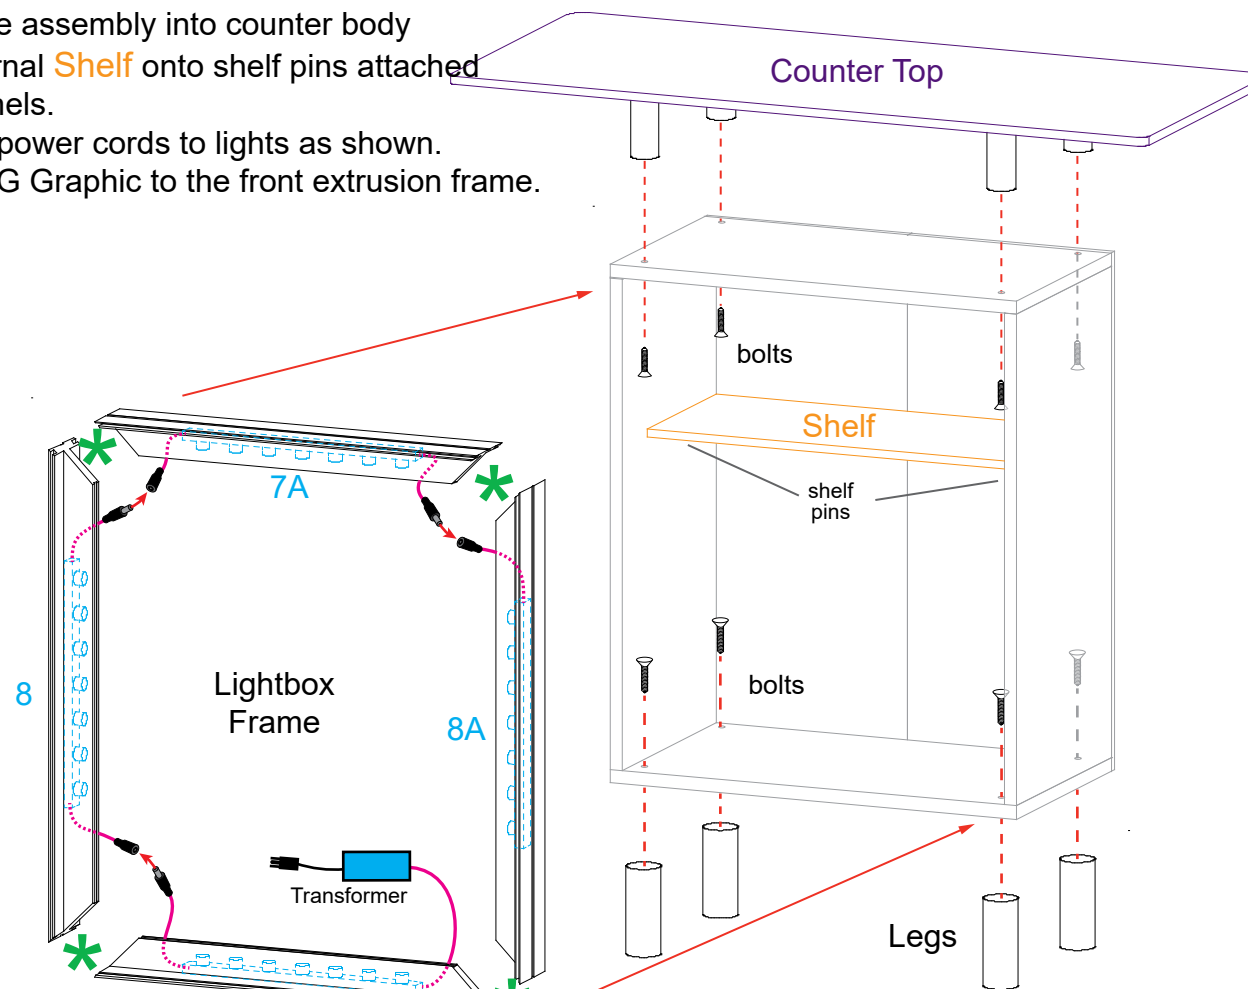

FRONT VIEW

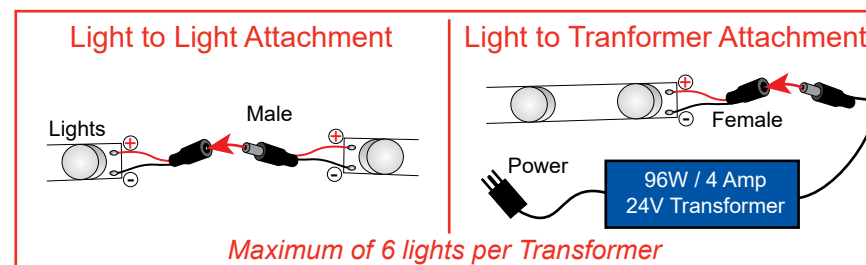

## SETUP INSTRUCTIONS

## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

## Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.  
**Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

## Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

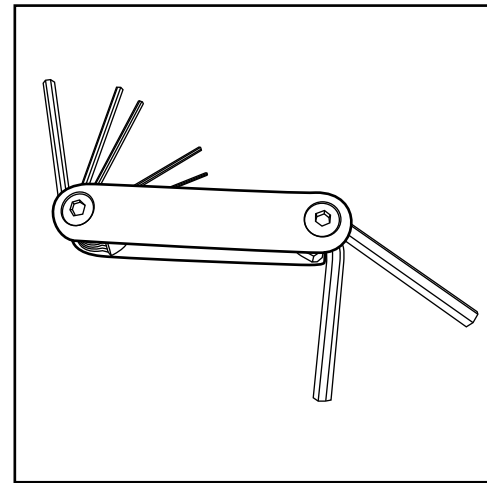


Hex Tool - Essential for Assembly

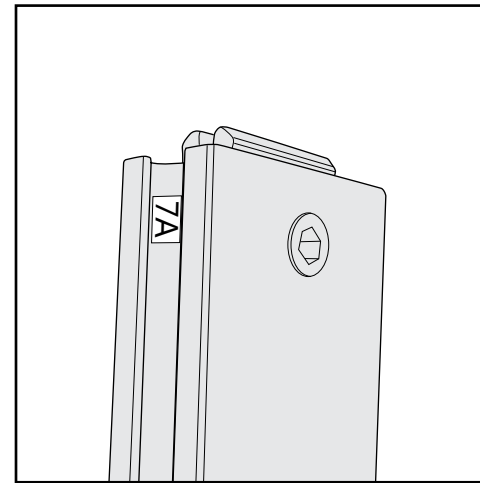


Part Identification - Numbering

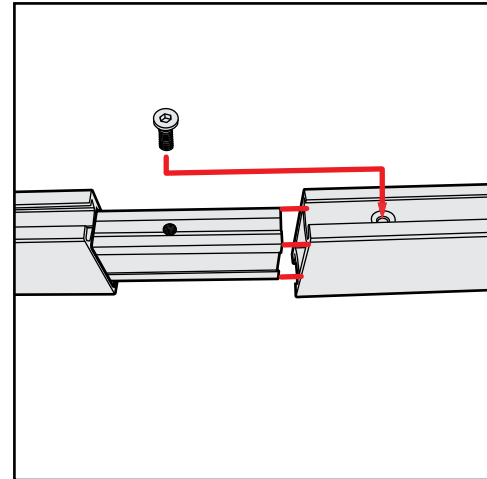


Spline Connection

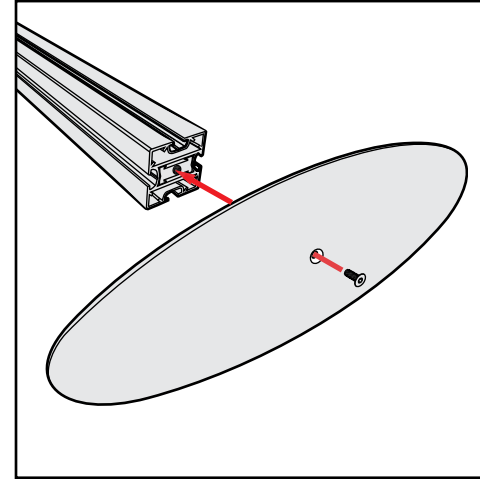

Base Plate & Extrusion Connection

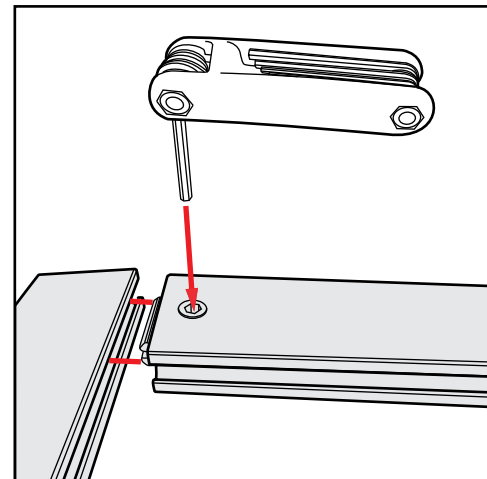

Extrusion & Lock Connection

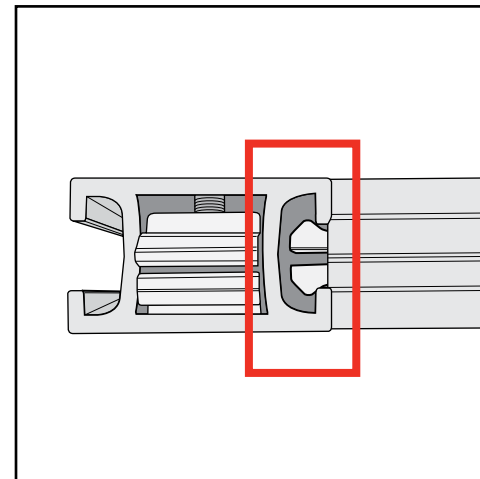


Engaged Lock



# WARNING



DO NOT USE POWER TOOLS

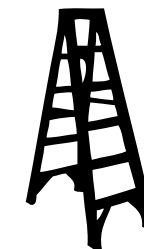

LADDERS OR LIFTS  
MAY BE REQUIRED




ALL CONNECTIONS MUST  
BE TIGHTLY SECURED


# SEG Graphic Installation *in 3 Steps*

*The Perfect Fit*


## STEP 1: Attach Corners

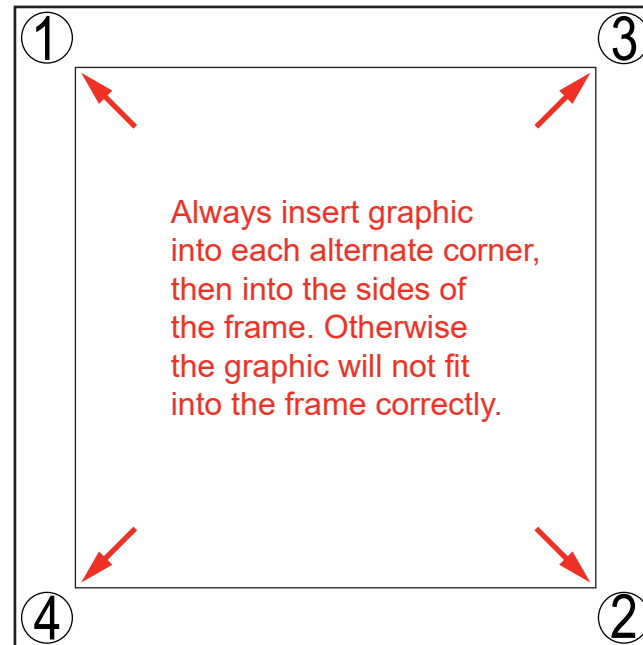

## STEP 2: Attach Middle

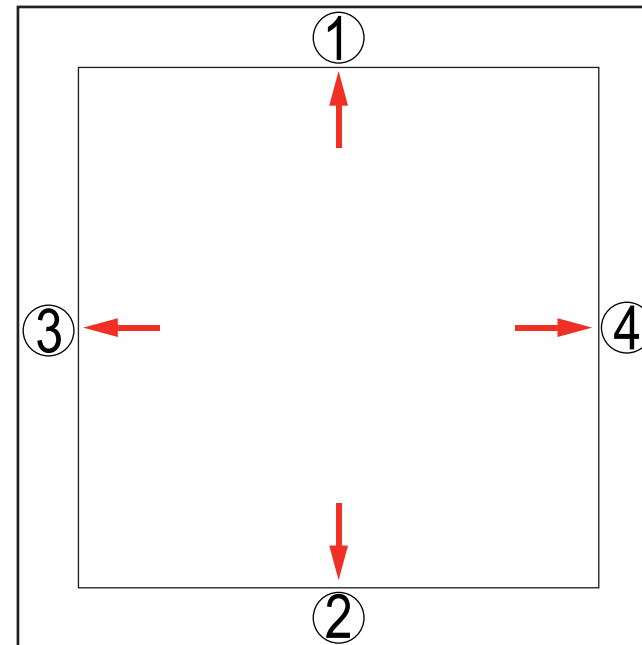

## STEP 3: Attach Sides

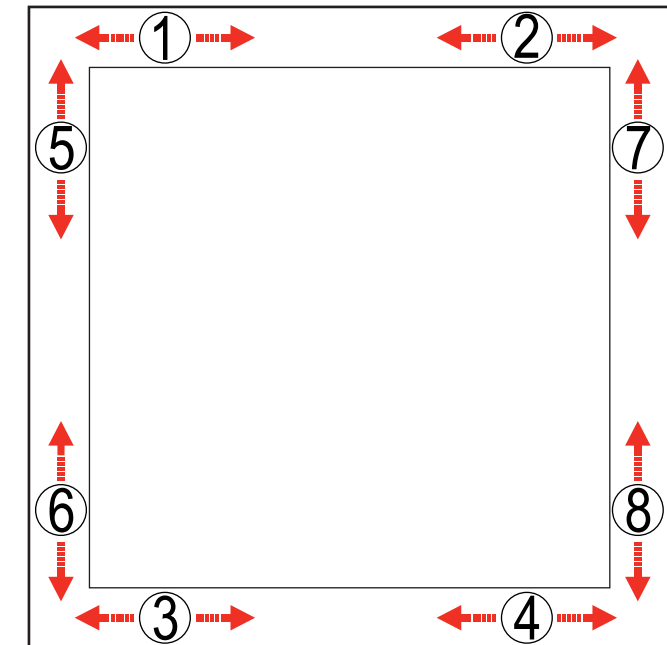

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.




To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.


Install video:




Top View of Each Level

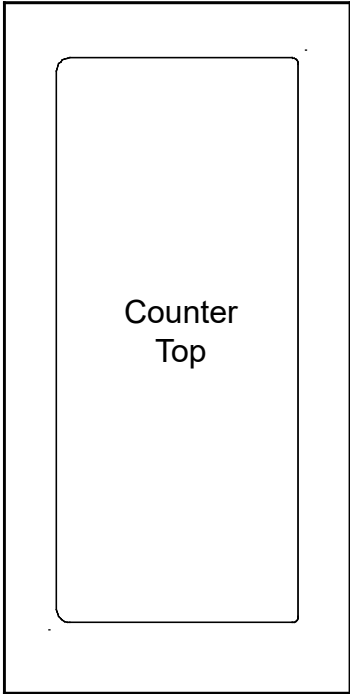


Level 1

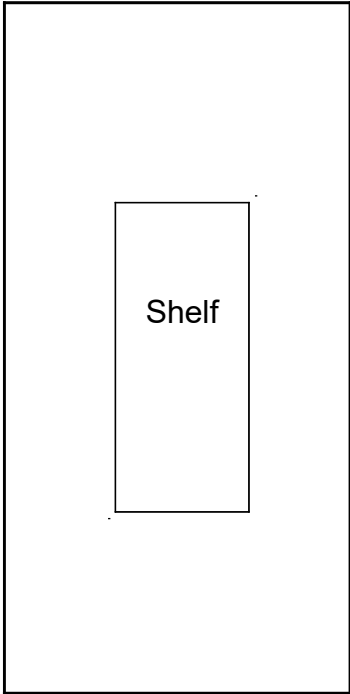

Level 2

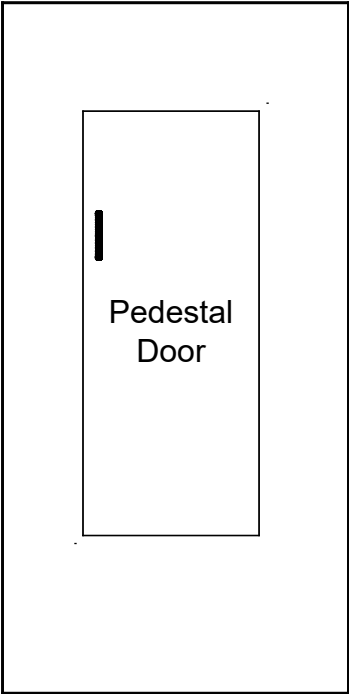


Level 3

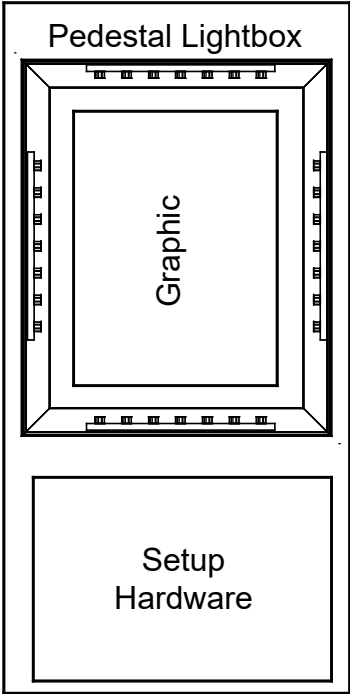


Level 3


## Top View of Each Level

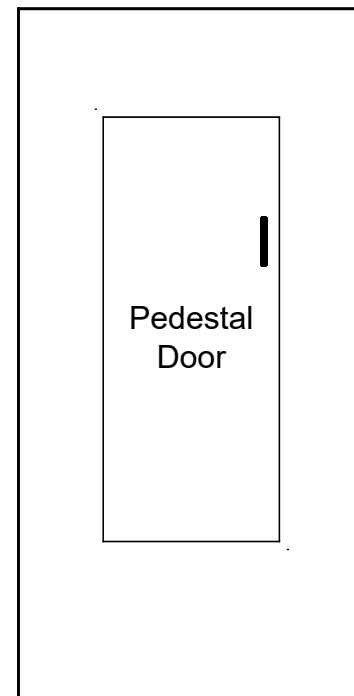

Level 1

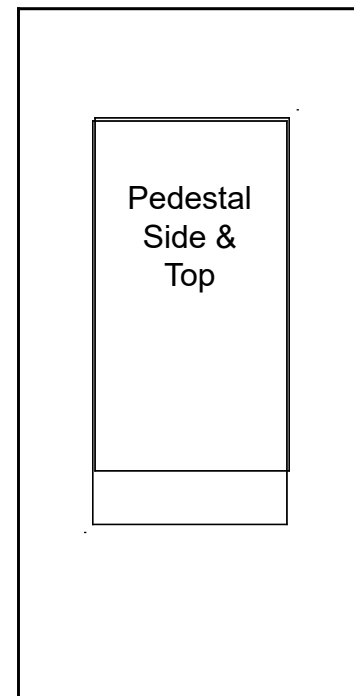

Level 2

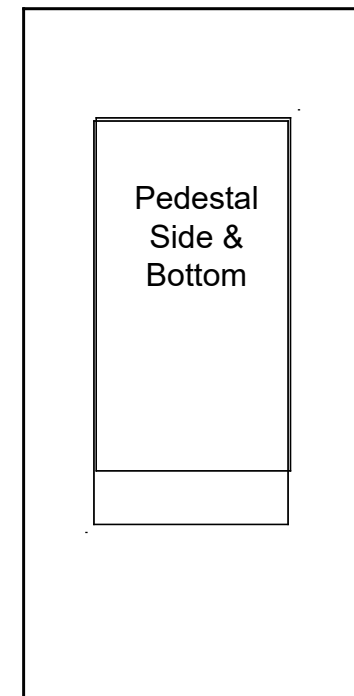

Level 3